

INSTRUCTION MANUAL

Bypassing Zones  
Instructions

***NAPCO 3200***

(5) Is the Bypass Button. (1) deactivates selected zones from the system. (2) unbypasses a bypassed zone.

**ADVANCED FEATURES**

**Security Bypass/Unbypass**

(*Security Bypass programmed?*  YES  NO.) In high-security applications, zones may be bypassed (or unbypassed) only if a valid code is entered first, as follows.

1. Enter a code valid for bypass, then press the [BYPASS] Button; "BYPASS ENABLED" will display.
2. Press the [BYPASS] Button then the zone number (or vice versa) to deactivate that zone.

Similarly, a bypassed zone may be *unbypassed* using the foregoing procedure.

**Function-Mode Bypass/Unbypass**

Zones may be bypassed (or bypassed zones may be *unbypassed*) in the Function Mode by either of the following methods. **Note:** When the panel is subsequently disarmed, all bypassed zones will revert to unbypassed zones.

- From "Display Zone Faults" screen (1) Display zone faults. The number of faulted zones will display briefly. (2) Press the NEXT Button to display the first faulted zone, then press the [BYPASS] Button to bypass the zone. (3) Press the NEXT Button to display the next faulted zone; press the [BYPASS] Button to bypass that zone. (4) Repeat Step 3 for each zone to be bypassed. To "unbypass" a bypassed zone, display the zone, then press the [BYPASS] Button once again.
- From the "Display Zone Directory" screen (1) Display the directory. The number of zones will display briefly. (2) Use the NEXT and PRIOR Buttons to select the zone to be bypassed. (3) When the zone is displayed, press the [BYPASS] Button. Repeat for each zone to be bypassed. To "unbypass" a bypassed zone, display the zone, then press the [BYPASS] Button once again.

BYPASS ENABLED

DISPLAY ZN FAULTS Y/N

BYPASSED 02 BACK DOOR

DISPLAY ZN DIRECTORY Y/N

BYPASSED 02 BACK DOOR