

SECURITY

SYSTEM

OWNER'S

MANUAL


***BYPASSING
ZONES***



**RF
Commander**  [®]

INDICATOR LIGHTS

EMERGENCY BUTTONS

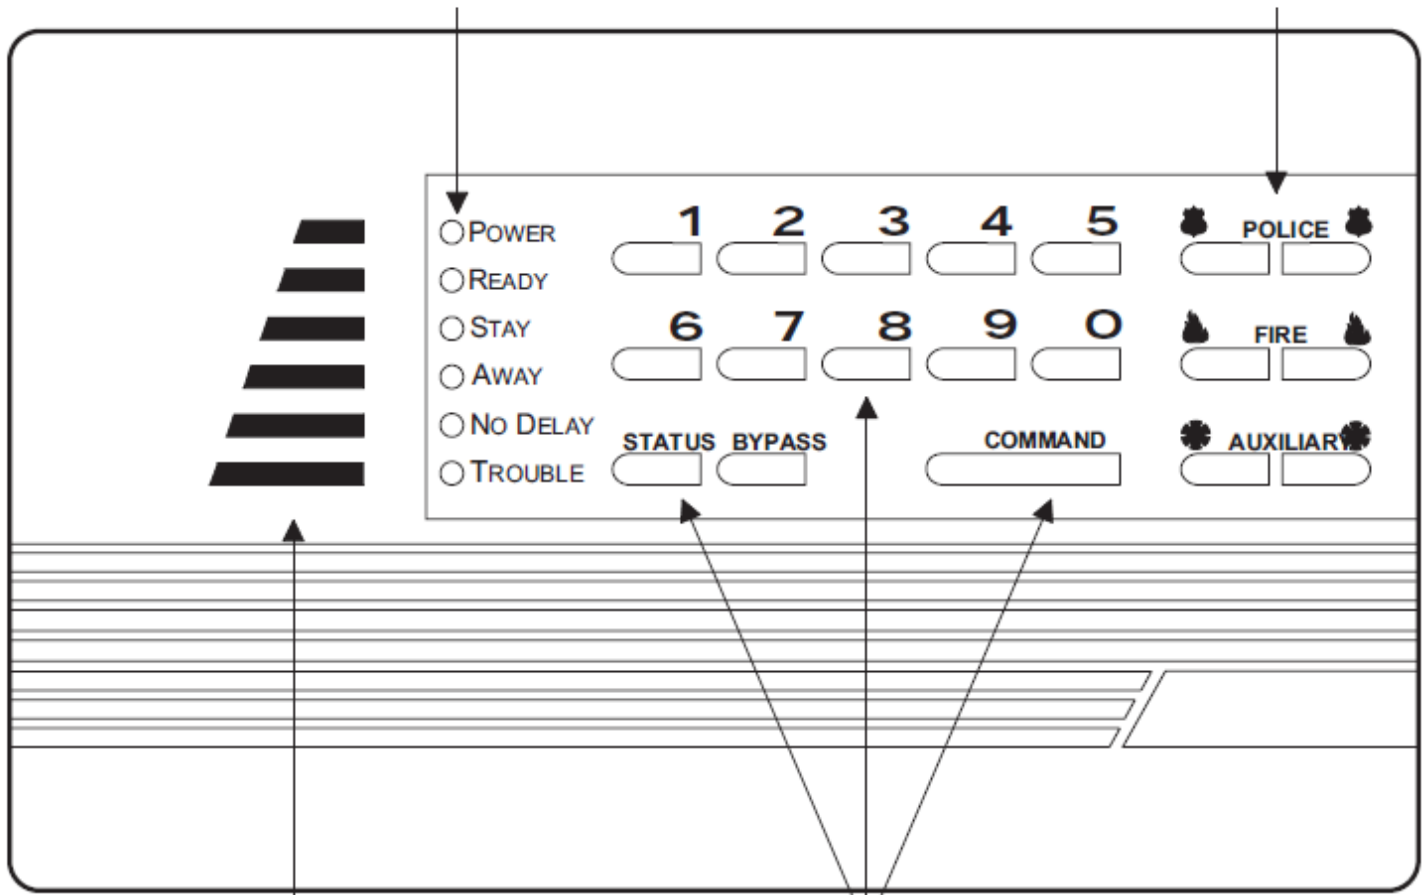

BUILT-IN SPEAKER

OPERATION BUTTONS

8333G06A.DSF

STATUS/TROUBLE SOUNDS

The Control Panel's built-in speaker and all Interior sirens serve as status annunciators. They provide audible indications, described below, of the current protection level when the STATUS button is pressed.

1 BEEP

Indicates that you have successfully accomplished the task you have attempted, including disarming to level 1, turning the CHIME or LIGHTS features ON and OFF, or bypassing sensors.

2 BEEPS

Sounds when system is armed to level 2 and after the exit delay time ends.

3 BEEPS

Sounds when system is armed to level 3 and after the exit delay time ends.

6 BEEPS EVERY MINUTE: TROUBLE

Indicates a Low Sensor Battery, Sensor Failure (Supervisory), CPU Low Battery, Fail To Communicate or Radio Receiver Failure. Stops when access code is used. Repeats every 24 hours if fault still exists. Press the STATUS button for a voice announcement of the trouble.

ALARM SOUNDS

FIRE ALARM: Steady tone siren.

POLICE ALARM: Slow ON-OFF-ON-OFF siren.

AUXILIARY ALARM: Fast ON-OFF-ON-OFF siren.

TROUBLE - (Red)

FLASHING - When something is not operating properly. Press STATUS button for voice message of problem.