

VISTA-15

VISTA-15CN

Security System

User Guide

Code Changes



® ADEMCO



Bypassing Protection Zones

Using the Key

BYPASS

This key is used when you want to arm your system with one or more zones intentionally unprotected. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed. **All bypasses are removed when an OFF sequence (security code plus OFF) is performed.** Bypasses are also removed if the arming procedure that follows the bypass command is not successful.

The system will not allow fire zones to be bypassed.

To bypass zones, the system must be disarmed first.

1. +
(Security Code) **BYPASS**

Enter 4-digit security code, then press the BYPASS key.

Example: Press then

2.
(Zone Numbers)

Enter zone numbers.

Enter the zone number(s) for the zones to be bypassed (e.g., 01, 02, 03, etc.).

Important! All single-digit numbers must be preceded by a zero (for example, enter 01 for zone 1).

3.

BYPASS 07 FRONT UPSTAIRS BEDROOM

Typical bypass message

Wait.

The keypad displays the word **BYPASS** along with each bypassed zone number (and a zone descriptor if programmed). Wait for these zones to be displayed, to be sure that intended zones are bypassed.

4.

DISARMED BYPASS Ready to Arm

Arm as usual.

Arm the system as usual when the keypad displays the **READY TO ARM** message.