


How to Use the Z900 Security Control

BYPASSING ZONES

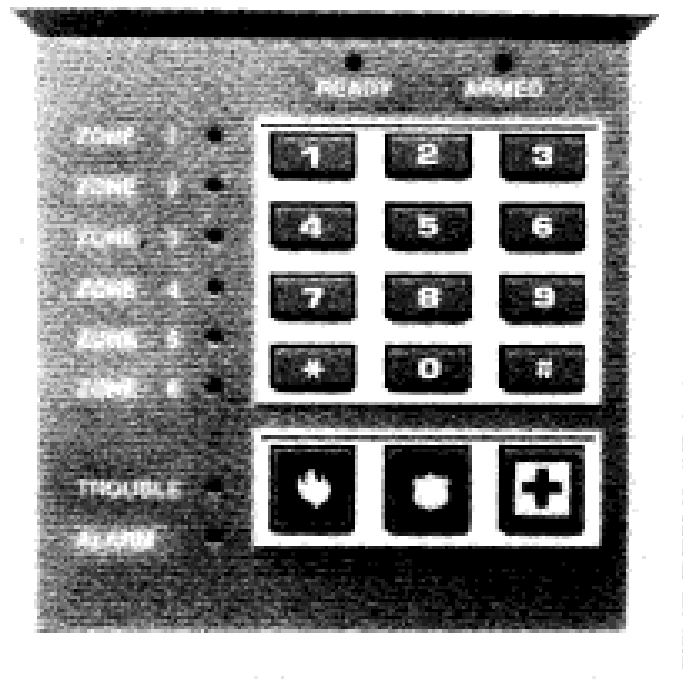

Zone Identification Card

Space is provided for recording the areas of protection which are assigned to each zone. Depending upon the installation, this card pulls out from the left or right side of the control station.

Trouble Indicator

If lighted, a trouble condition exists. Contact your security representative.

Important Phone Numbers

Alarm Co:	
Police:	
Fire:	

Individual Zone Status


If lighted, zone is not secure. Check doors, windows, etc. **If not lighted**, zone is secure. **If blinking**, zone is bypassed.

Ready status

If lighted, the system is ready to be armed. **If not lighted**, one or more zones are faulted. Indicator(s) of zone(s) at fault will be lighted.

Armed Status

If lighted, the system is armed. **If not lighted**, the system is disarmed. **If blinking**, time is being provided to exit the building, after which the system will be armed.

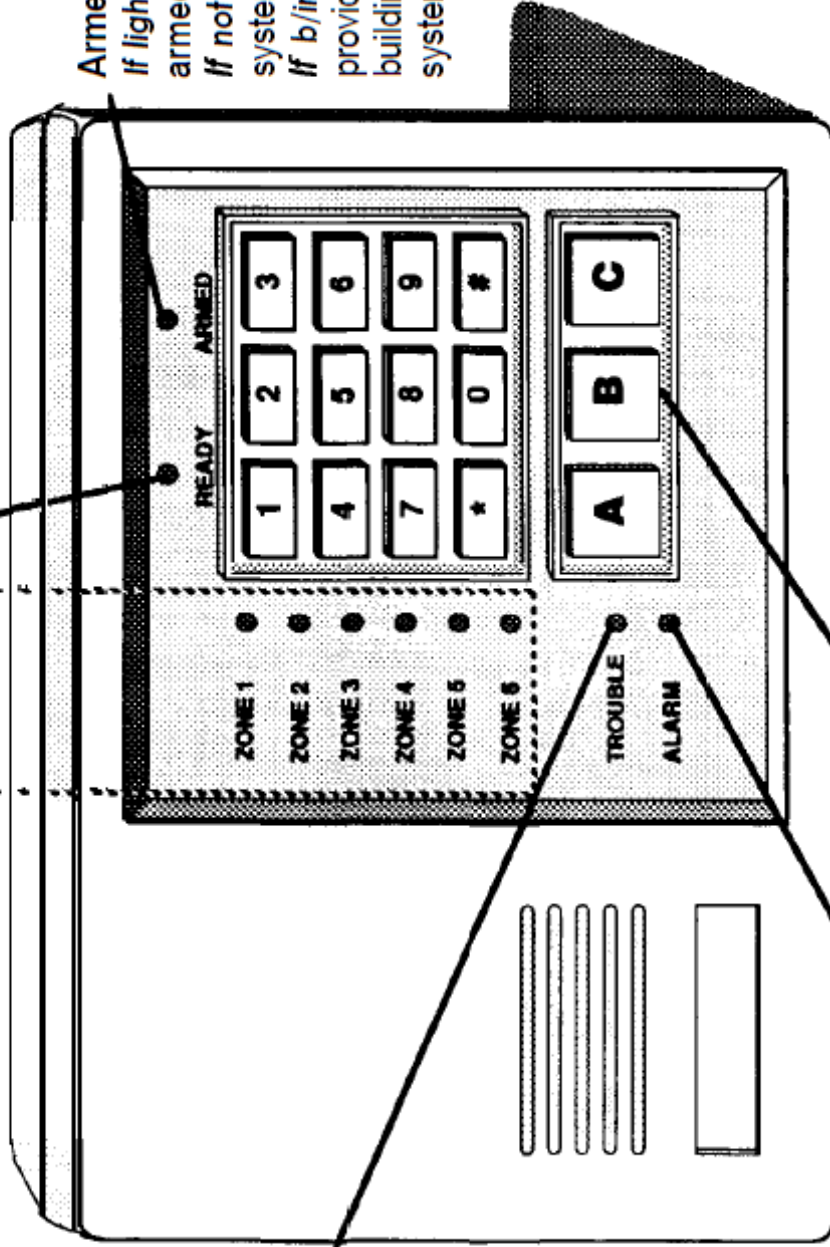

Alarm Indicator

If lighted, an alarm has occurred.

Emergency Panic Keys

PANIC A = _____
PANIC B = _____
PANIC C = _____

NOTE: The Emergency Panic Keys may or may not be active. Check with your security representative for details.

BYPASSING ZONES

The bypass key (#) is used to bypass selected zones in your system. A bypassed zone will NOT be capable of activating an alarm as it is temporarily removed from your system. Bypassing (also referred to as shunting) is most commonly used to allow free movement of an area (zone or group of zones) while arming the rest of the system or to temporarily remove a zone or zones that require service allowing partial use of the system until repaired. When zones are bypassed, the corresponding ZONE indicators flash to indicate that they have been removed from operation. The flashing will cease 30 seconds after the exit delay expires when the system is armed.

Note: When zones are bypassed, security is compromised. Do not instruct temporary users on use of the bypass feature.

To Bypass A Zone

The system must be disarmed.

Press the BYPASS key (#) then enter the number of the zone (1-6) to be bypassed.

The corresponding ZONE indicators (1-6) will blink to indicate zones that have been bypassed. The blinking will cease 30 seconds after the system is armed and the exit delay expires.

Repeat steps 2 and 3 to bypass other zones.

To Cancel A Zone Bypass

The system must be disarmed.

Press the BYPASS key (#) followed by the number of the zone (1-6) to be restored to service.

The ZONE indicator of the previously bypassed zone will stop blinking.

To Cancel All Zone Bypasses

Press the BYPASS key (#) followed by key "9".

All ZONE indicators will stop flashing. The zones are returned to operation.

To Bypass All Faulted Zones Simultaneously (Not available in U.L. Listed Systems).

The system must be disarmed.

Press the BYPASS key (#) then press the "0" key.

All faulted zones will simultaneously be bypassed. The corresponding ZONE indicators (1-6) will blink to indicate zones that have been bypassed. The blinking will cease 30 seconds after the system is armed.