 


## CHANGING YOUR PRIMARY ACCESS CODE

### When to Use:

- When you feel your code is known by someone you do not want to have access.

### What to Do:



1. Press **\*+CODE#+6** from any TouchTone phone (off hook), the system beeps the internal sirens once.
2. Immediately enter your new access code. The system announces your new code "NNNN OK."

**CAUTION: Avoid using the number 6 in your primary and temporary access codes. Since the system uses 6 to bypass sensors, it could interfere with normal system arming when detected as part of your access code.**

3. Listen carefully to the code announcement to be sure it is correct.

Example: your present access code is 1234 and you want to change it to 5432. Press: **\*+1234#+6+5432**.



For the Alphanumeric Touchpad:

1. Press **CODE** + STATUS + **6**. The display will read ACCESS CODE \_\_\_\_.
2. Enter your new code. The touchpad displays: ACCESS CODE OK.

### What Will Happen:

- The sirens BEEP an acknowledgment.
- Your telephone announces "5432 OK."

### Notes:

- Don't forget your code. If you do forget, a service call may be necessary.
- We do not recommend using 1234 or 1111 as the access code.
- **IMPORTANT!** 7777, 8888, and 9999 cannot be used as access codes. These are panic codes in the security system and cannot be changed.