


Instruction
Manual

Bypassing Zones

PC550

With PC500RK Keypad

DSCTM
Security Products

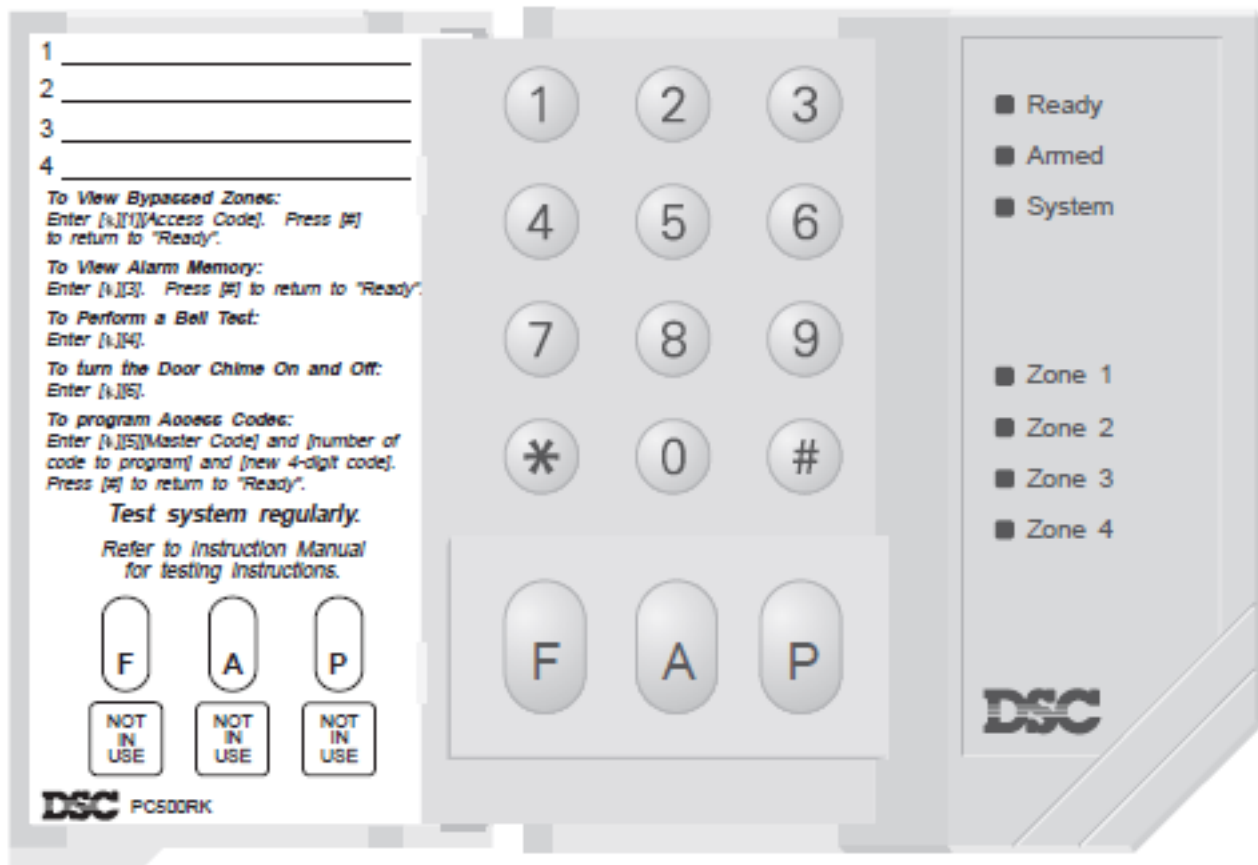

Bypassing Zones

A “bypassed” zone will not cause an alarm. Zones may be bypassed to allow access to part of the protected area while other zones are armed. For example, you could bypass the zone protecting your living room. This would allow you to remain in the room, while the other zones on your system are armed. With the system disarmed, enter [*][1][Access Code] to display bypassed zones. The Zone Lights representing bypassed zones will come ON. Ensure that any zone displayed as being bypassed is intentionally bypassed. Zone bypasses are automatically cancelled when the panel is disarmed.

To Bypass Zones:

Enter [*][1][Access Code]; the “System” light will FLASH.

Enter the number of the zone to be bypassed; the corresponding Zone Light will come ON to indicate that the zone is bypassed. To remove a bypass, enter the zone number to shut its Zone Light OFF. When all desired zones are bypassed, press the [#] Key to return to “Ready”.

When you arm your system, the zones you have indicated will now be bypassed. When arming the system with bypassed zones, it is always a good idea to enter the [*][1][Access Code] command to review the list of bypassed zones before entering an Access Code to arm the system. After ensuring that the desired zones are bypassed, press the [#] Key, and then enter an Access Code to arm the system.

NOTE: Do not bypass fire zones.