


# **Commander<sup>®</sup>** --- **2000**

## Security System Owner's Manual

*Code Changes*



**Interactive Technologies Inc.**  
2266 North 2nd Street  
North St. Paul, MN 55109

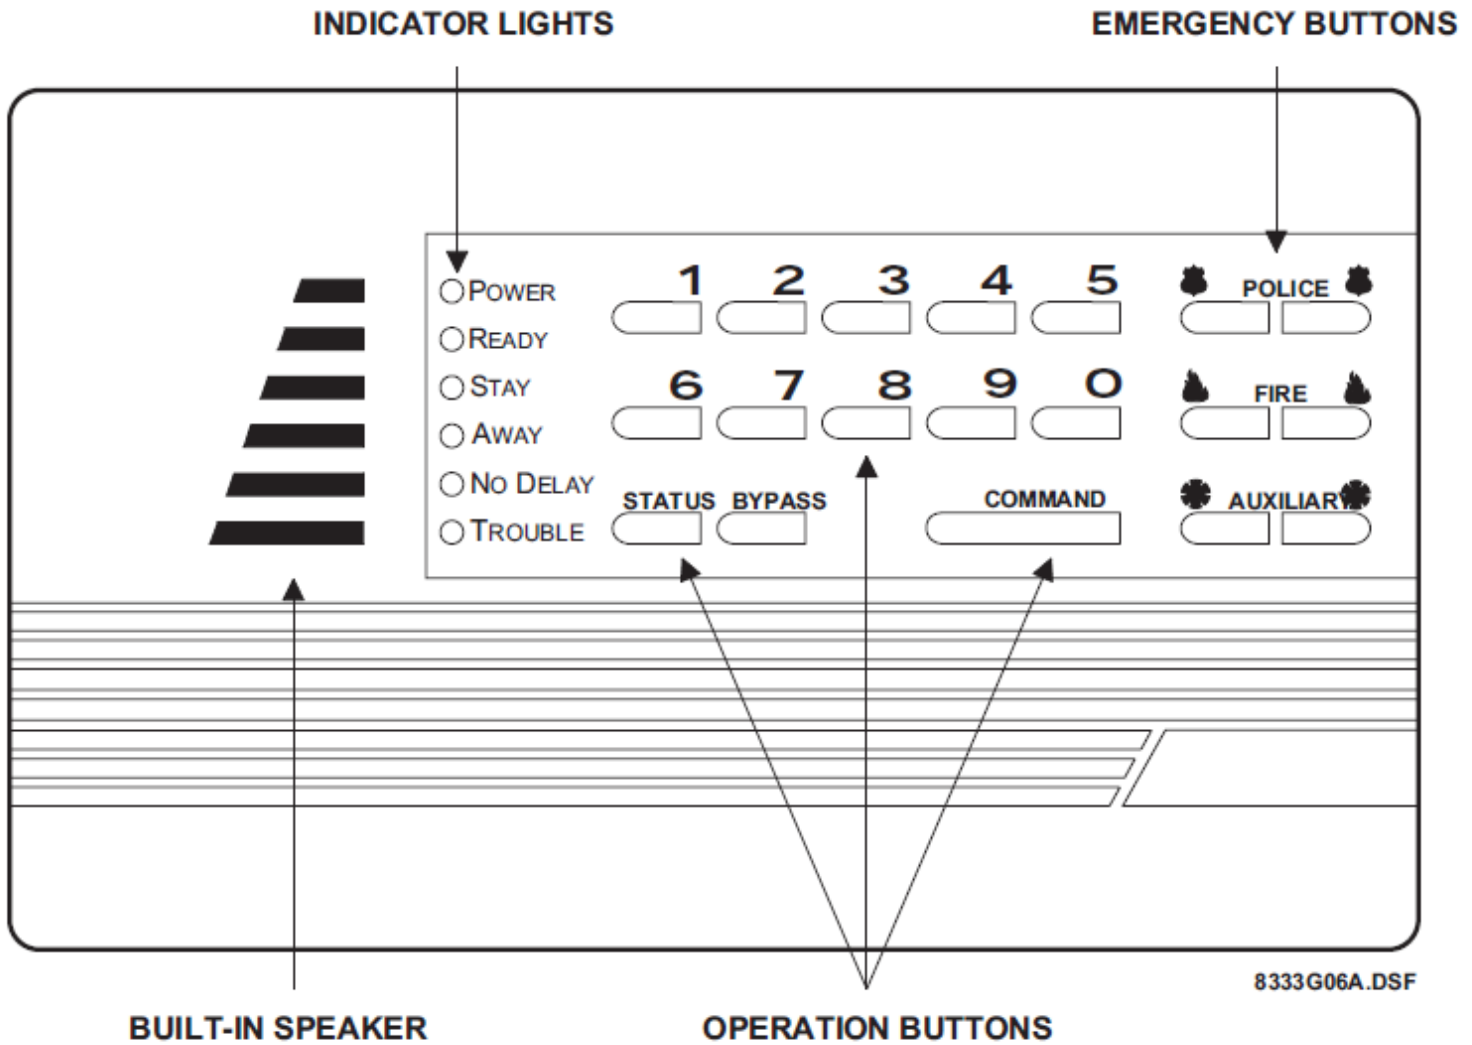

## Using Access Codes

An access code is a four-digit number that lets you operate the system and prevents unauthorized use of the system. An access code is required for most system commands (unless you are using the Magic Key™).

**WARNING:** Select access codes you and other system users will remember. If you forget your primary access code, contact your security consultant.

### Primary Access Code

The primary access code allows you to perform all system commands. The system allows you to have one primary access code. The default primary access code is 1234. You should change your primary access code from the default to a number that you can remember.

### ***To change your primary access code:***

1. Enter primary ACCESS CODE + STATUS + 8.  
The panel beeps once.

2. Enter the new primary ACCESS CODE.

After five seconds, the panel announces, [new primary access code] OK, indicating that the primary access code was changed.

**NOTE:** Because the first two digits of your duress code are the same as the first two digits of the primary access code, when you change the primary access code, the duress code also changes (see "Silent Duress Alarm" on page 25).

**NOTE:** If your temporary access code is disabled, then changing your primary access code will automatically make your old primary access code the new temporary access code. If you want the temporary access code to remain disabled, you must disable it again using your new primary 16 access code each time you change your primary access code.

## **Temporary Access Code**

The temporary access code allows you to perform all system commands except changing access codes and bypassing sensors directly. The system allows you to have one temporary access code. You might give the temporary access code to a babysitter or other service personnel.

### ***To add or change the temporary access code:***

1. Enter primary ACCESS CODE + STATUS + 7.  
The panel beeps once.

2. Enter the temporary ACCESS CODE.

After five seconds, the panel announces, [temporary access code] OK, indicating that the temporary access code was changed.

### ***To disable the temporary access code:***

1. Enter primary ACCESS CODE + STATUS + 7.  
The panel beeps once.

2. Enter the primary ACCESS CODE.

After five seconds, the panel announces, [primary access code] OK, indicating that the temporary access code was deleted.

**NOTE:** If your temporary access code is disabled, then changing your primary access code will automatically make your old primary access code the new temporary access code. If you want the temporary access code to remain disabled, you must disable it again using your new primary access code each time you change your primary access code.

## **Secondary Access Codes**

Secondary access codes allow you to perform all system commands, except changing access codes and bypassing sensors directly. You can have up to four secondary access codes. The secondary access codes can be used in the same way as the temporary access code, except the secondary access codes can only be set and changed by your security consultant.