

INSTRUCTION MANUAL

Code Changes  
Instructions

***NAPCO 9600***

## PROGRAMMING (Optional)

### Programming User Codes


Do not attempt to program a code containing any blank spaces between digits. In selecting your codes, do not program repetitive numbers (1111), consecutive numbers (1234), your birth date, address, or other obvious combinations.

The first code displayed will be the default "U01 123....-.-" (123), which, for security reasons, may not be selected as a User Code. Choose up to six digits for your new code (a minimum of four is recommended, and required in UL installations)

1. Use the [FUNCTION] Button to locate the cursor (position indicator) over the User Number.

2. Enter a User Number directly as a two-digit number (enter 1-9 as "01"-"09") using the number buttons. The cursor will automatically advance to the User Code and read the existing code, if any.

3. Enter the new User Code directly, using the number buttons. If an old

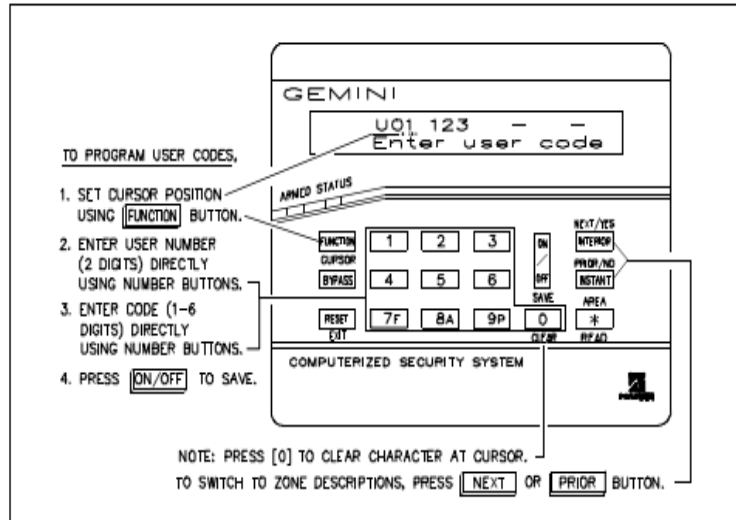

#### Programming User Codes.

code is displayed, simply program over it. To erase the digit at the cursor, press the [\*] Button, then the [0] Button.

4. Press the [ON/OFF] Button to save the code in memory.

Repeat Steps 1 through 4 for each user.

**Note:** To void a code, blank out each digit by pressing [\*] [0], then press the Save ([ON/OFF]) Button.