

INSTRUCTION MANUAL

Date and Time
Instructions

Power series
PC 1500/1550



Setting the Time and Date

Step 1 – Enter time programming by pressing
[*][6] + [Master Code] + [1]

Step 2 – Enter [HH:MM]

Step 3 – Press [#] to exit

Note: Program the time using military standard
(e.g. 8:00 pm = 20:00 hours)