

Simon XT User Guide

Code Changes



System Programming

To enter system programming mode, do the following:

1. Enter the system menu by pressing the scroll up/down buttons or the Enter button in the upper right of the panel.
2. Scroll up/down to *System programming*, and then press **Enter**.
3. The panel displays *Enter code*.
4. Enter your master code, and then press **Enter**.

Access codes

There are three types of access codes: master, user, and duress.

Master code. The master code is your most powerful code and can be used for all user operations including programming. To change the master code, do the following:

1. Enter the *System programming* menu.
2. Scroll up/down to *Access codes*, and then press **Enter**.
3. Scroll up/down to *Master code*, and then press **Enter**.
4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press **Enter**.
6. Press **Status** repeatedly to exit.

The initial value of the master code is 123, 1234,12345, or 123456, depending on the installer- programmed access code length.

User codes 1 to 8. There are eight user codes, which can be used for many user operations, but not sub disarming, programming, or bypassing sensors.

To change a **user code**, do the following:

1. Enter the *System programming* menu.
2. Scroll up/down to *Access codes*, and then press **Enter**.
3. Scroll up/down to the user code you want to change, and then press **Enter**.

4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press **Enter**.
6. Press **Status** repeatedly to exit.

Initially, all user codes are blank. A user code can be deleted by pressing **Disarm** while the code is being changed.

Duress code. The duress code, when used in place of another user code, generates a silent duress alarm which is reported to the central monitoring station.

To change the duress code:

1. Enter the *System programming* menu.
2. Scroll up/down to Access codes, and then press **Enter**.
3. Scroll up/down to Duress code, and then press **Enter**.
4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press **Enter**.
6. Press **Status** repeatedly to exit.

Initially, the duress code is blank. The duress code can be deleted by pressing **Disarm** while the code is being changed.