


# ***How to Use the Z700 Security Control*** *Bypassing Zones*

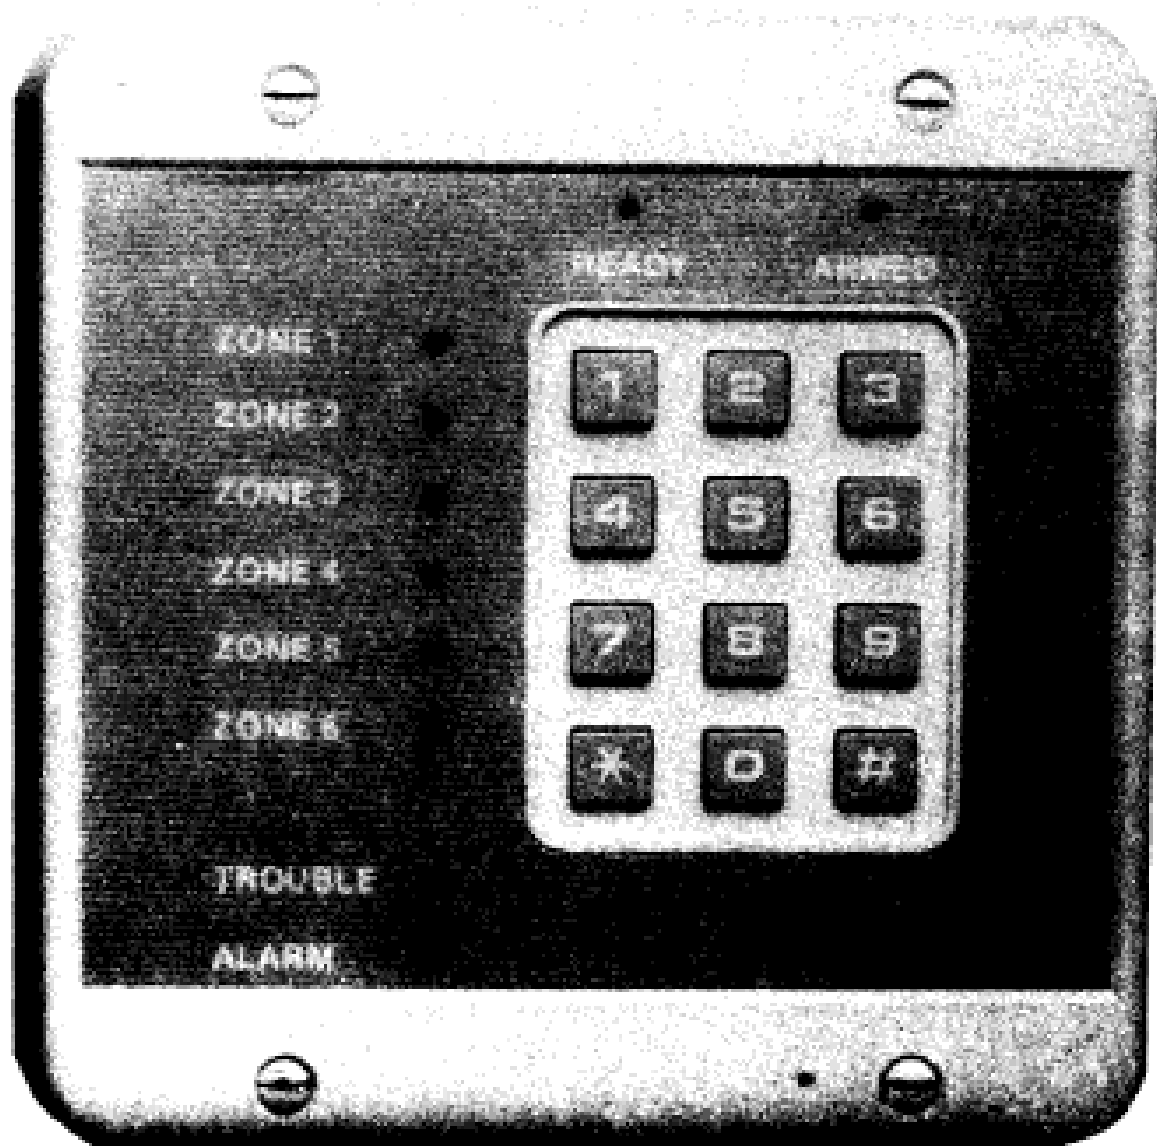

## **SPECIAL FEATURES (continued)**

---

### **Bypassing Zones**

The bypass key (#) is used to bypass selected zones in your system. A bypassed zone will NOT be capable of activating an alarm as it is temporarily removed from your system. Bypassing (also referred to as shunting) is most commonly used to allow free movement of an area (zone or group of zones) while arming the rest of the system or to temporarily remove a zone or zones that require service allowing partial use of the system until repaired. When zones are bypassed, the corresponding ZONE indicators flash to indicate that they have been removed from operation. The flashing will cease 30 seconds after the exit delay expires when the system is armed.

**Note: When zones are bypassed, security is compromised.**

#### **□ To Bypass A Zone**

1. The system must be disarmed.
2. Press the BYPASS key (#) then enter the number of the zone (1-6) to be bypassed.
3. The corresponding ZONE indicators (1-6) will blink to indicate zones that have been bypassed. The blinking will cease 30 seconds after the system is armed and the exit delay expires.
4. Repeat steps 2 and 3 to bypass other zones.

#### **□ To Cancel A Zone Bypass**

1. The system must be disarmed.
2. Press the BYPASS key (#) followed by the number of the zone (1-6) to be restored to service.
3. The ZONE indicator of the previously bypassed zone will stop blinking.

#### **□ To Cancel All Zone Bypasses**

1. Press the BYPASS key (#) followed by key "9".
2. All ZONE indicators will stop flashing. The zones are returned to operation.

#### **□ To Bypass All Faulted Zones Simultaneously**

1. The system must be disarmed.
2. Press the BYPASS key (#) then press the "0" key.
3. All faulted zones will simultaneously be bypassed. The corresponding ZONE indicators (1-6) will blink to indicate zones that have been bypassed. The blinking will cease 30 seconds after the system is armed.