

### Commander 2000 Trouble Lights

When the system is in trouble the keypad will beep 6 times every minute. To stop the beeping and hear the trouble condition press "STATUS". The trouble condition may be one of the following issues:

- 1- System has AC power failure (No power at transformer).
- 2- A specific sensor may have a low battery (Replace the battery as soon as possible).
- 3- System has a failure to communicate (Panel can't communicate through the phone line to the monitoring station).
- 4- System has sensor failure (This could either be a low battery in a sensor or the sensor is defective and no longer working).
- 5- Alarm panel has a low battery (Replace panel batteries).