


DigitTech

XP-400


Owner's

Guide

Code Changes

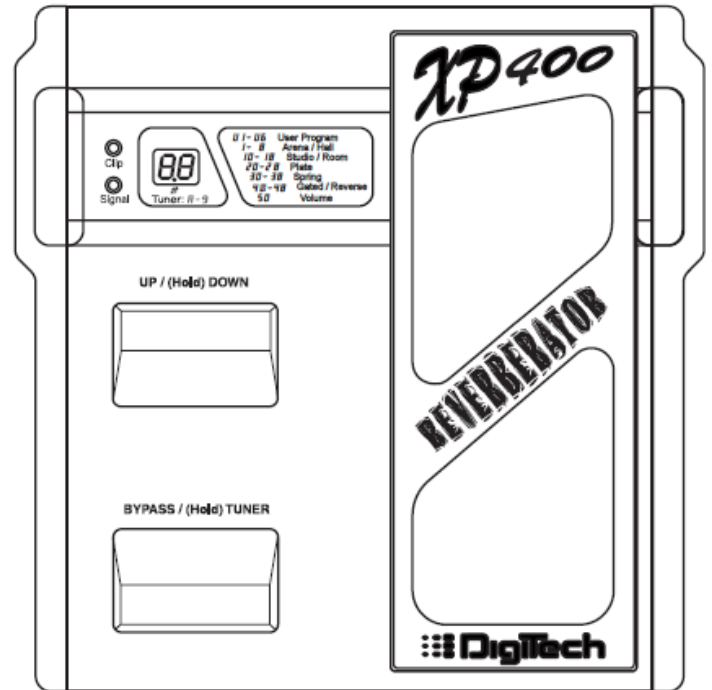

Front and Rear Panel Controls and Functions

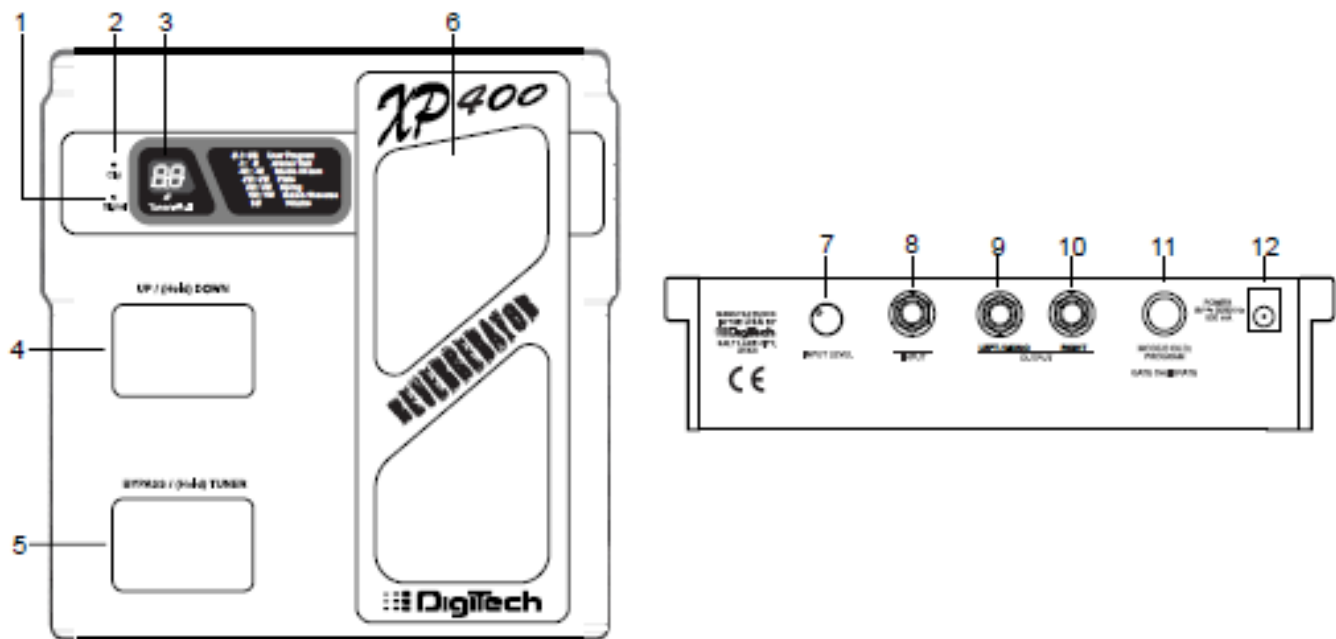

1. **Signal LED** - Indicates that signal is entering the XP-400.
2. **Clip LED** - Indicates that signal is clipping in the XP-400.
3. **Status Display** - The Status Display window shows the current information including: bypass, current effect program number, and Chromatic Tuner information. When the XP-400 is in Program mode (Factory or User), the display will either read: **1-50** (Factory) or **U 1-UE** (User).

***Note-** A complete listing of all Factory programs is located on the bottom panel of the XP-400.

4. **Program UP/(Hold)DOWN Switch** - Lets you select programs. Pressing once will move up through the program menu. Press and hold and the XP-400 will move down through the program menu.
5. **BYPASS/(Hold)TUNER Switch** - Puts the unit into Bypass by pressing the footswitch once. To select the Tuner, press and hold the footswitch until the display reads: **tu**, indicating that you are in Tuner mode.
6. **Expression Pedal** - Controls the selected effect or volume.
7. **Input Level Control** - Sets the amount of signal being sent into the unit. The ideal setting for the input control of the XP-400 is to set the input level at a point where the Clip LED indicator occasionally lights.
8. **Input Jack** - Connect instrument here using 1/4" guitar cord.
9. **Left/Mono Output** - This is the this is the Left/Mono output of the the XP-400.
10. **Right Output** - This is the Right output of the XP-400.

Entering the User Program Mode

Press * followed by 8 and then enter the User 1 code. The Armed, Status and System Lights will flash, and the keypad will beep 4 times. You are now in the User Program mode. Zone lights 1 through 4 will light to indicate any User Codes presently programmed.

Programming / Reprogramming User Codes

1. Press the User number to be programmed. (For example, press 2 to program the User 2 code.). The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to program.
2. Press in the 4 digits of the new User 2 code, the keypad will beep 4 times.
3. If there are more user codes to be programmed, return to step 1 above, otherwise, go to Exiting the User Program Mode below.
4. Press # to exit

Erasing a User Code

1. Press the User number to be erased. The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to erase.
2. Press (check mark button). The zone light will go out to indicate that the user code has been erased.
3. If there are more user codes to be erased, return to step 1 above, otherwise, go to Exiting the user Program Mode below.

Exiting the User Program Mode

When you are done programming or erasing User codes, press # to Exit the User Program Mode.

Ambush Code - In the event that you are forced by an intruder to disarm your system, this special code can be used to disarm the system, and simultaneously send a silent alarm to Central Station. If your system has the Ambush feature enabled, the code assigned as the User 4 code will function as your Ambush Code