


OPERATING GUIDE for your GEM-RP8LCD KEYPAD *Code Changes*

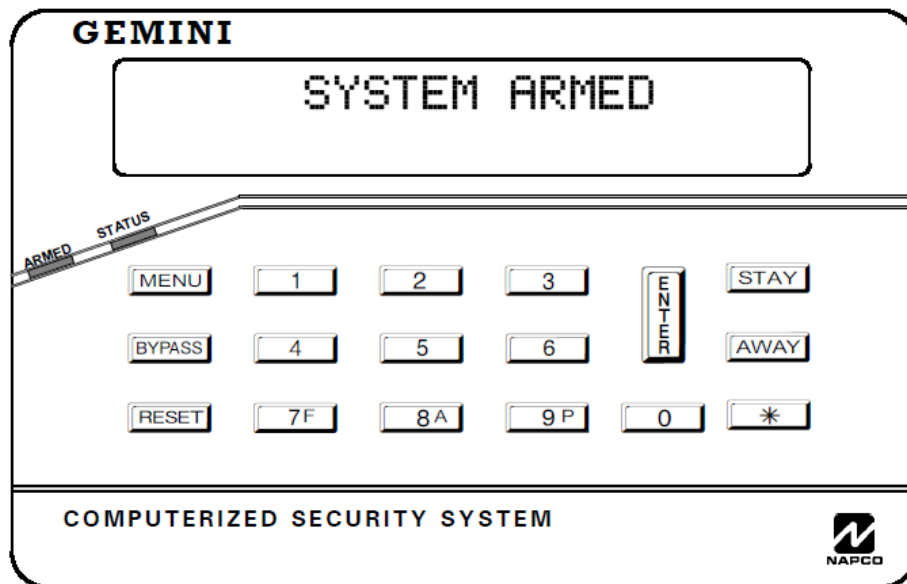

Programming / Reprogramming User Codes

- 1 Press function followed by 8/A Key, then master code 1, then ON/OFF button
- 2 Press the User number to be programmed. (For example, press to program the User 2 code.). The keypad will beep 2 times and the corresponding Zone will flash to indicate the user number you are about to program.
- 3 Press in the 4 digits of the new User 2 code, the keypad will beep 4 times.
- 4 If there are more user codes to be programmed, return to step 1 above, otherwise, go to Exiting the User Program Mode below by pressing reset.

Erasing a User Code

- 1 Press function followed by 8/A key, then master code 1, then ON/OFF button
- 2 Press the User number to be erased. The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to erase.
- 3 Press instant key. The zone light will go out to indicate that the user code has been erased.
- 4 If there are more user codes to be erased, return to step 1 above, otherwise, go to Exiting the User Program Mode below.

Exiting the User Program Mode

When you are done programming or erasing User codes, press "reset" to Exit the User Program Mode.

Programming User Codes

Ambush Code - In the event that you are forced by an intruder to disarm your system, this special code can be used to disarm the system, and simultaneously send a silent alarm to Central Station. If your system has the Ambush feature enabled.