

User's Guide


CODE CHANGES

DSC[®]
Power 864[™]


S E C U R I T Y S Y S T E M

Keypad Buttons & Lights


LCD5501Z Keypad

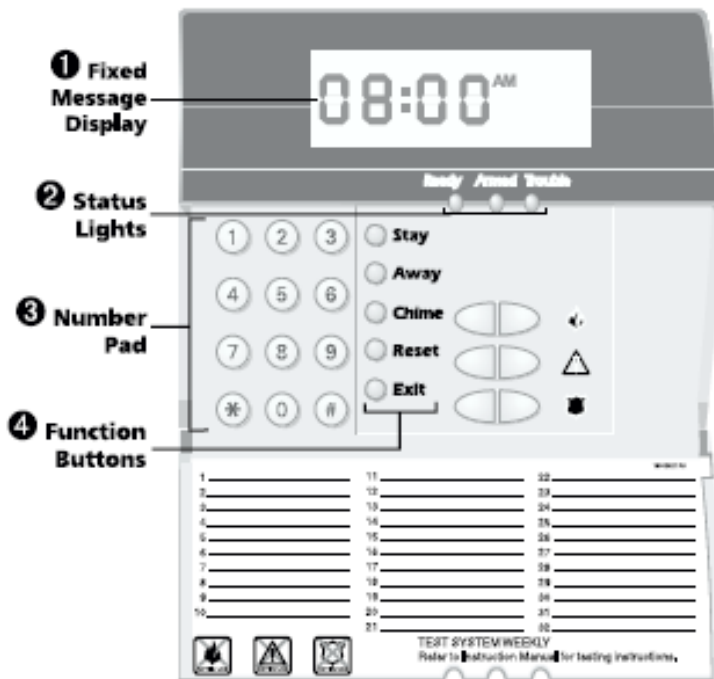


LCD5500Z Keypad

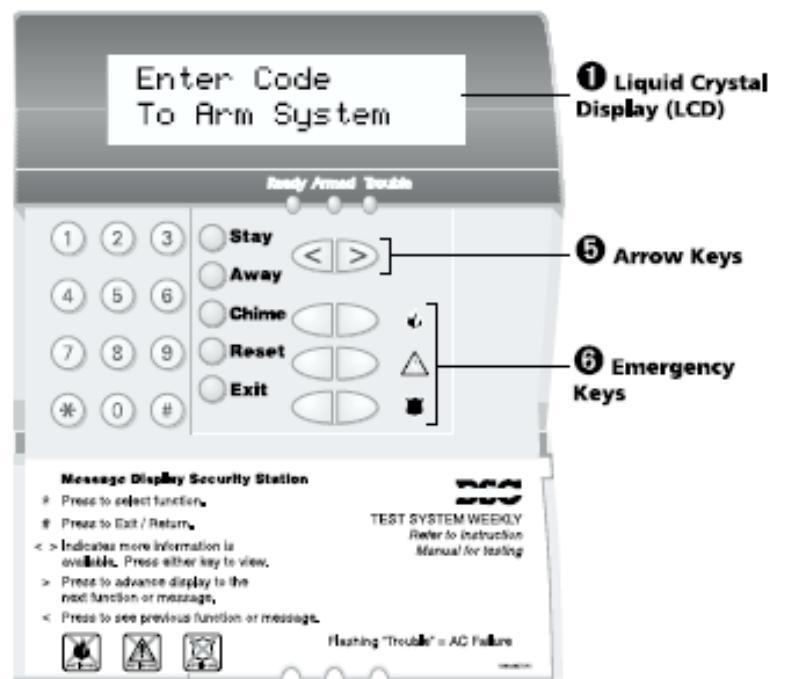


PC5532Z (LED) Keypad

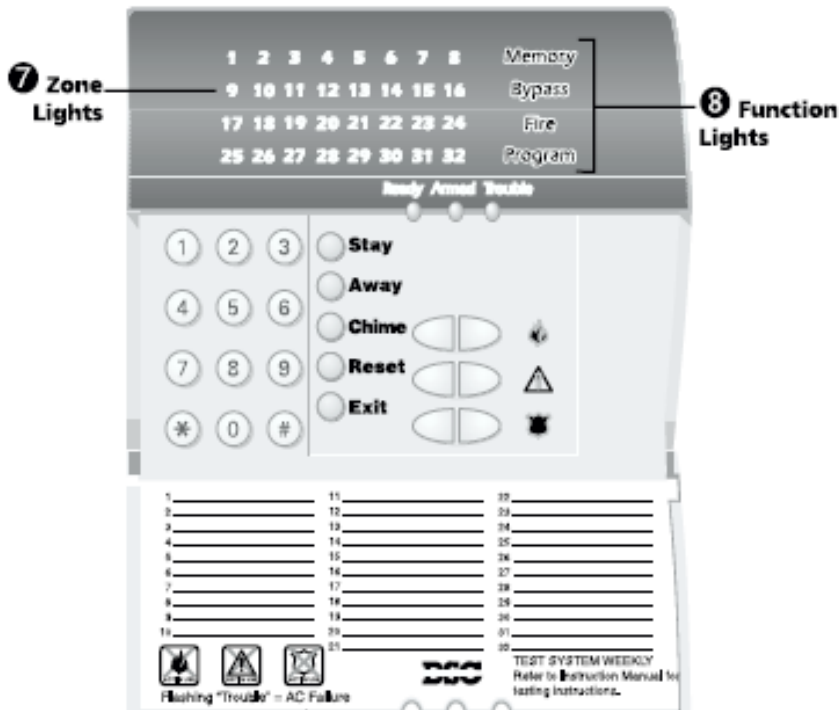

PC5508Z

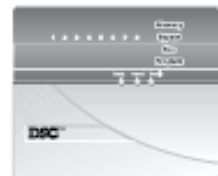

PC5516Z

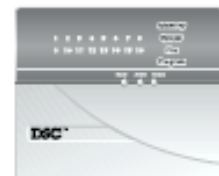

Your installer may have installed one of these LED keypads if you have 16 or fewer zones on your system. These keypads operate in the same way as the PC5532 keypad.

Programming Access Codes

The master code (code 40) can be used to program system options, arm and disarm the system and program other access codes. You can program up to 32 additional access codes (01 through 32). You can change or program access codes at both PC55XXZ and LCD keypads.

Other access codes, such as system supervisory and duress codes, are available. Contact your installer for more information.

NOTE: To program duress codes, contact your installer. It is the installer's duty to program unique numerical combinations for duress codes.

LCD5500Z Keypads

1. * 5 Master Code.
2. Use the (< >) keys to scroll to code number to edit (01 to 32) 40 for master.
3. If there is a letter "P" beside the code number (e.g., [01P]), that code has already been programmed. If there is no "P", then no code is programmed for that access code number. If an access code already exists for the code number you select, it will be replaced by the new code.
4. To select a code for editing, press [*]. The keypad will display "Enter New Code < >".
5. Enter the new [code]. All codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Once the code has been entered, the keypad will beep 3 times. NOTE: Do not use the factory default or obvious codes such as [1111] or [1234].
6. To exit access code programming, press # 3 times.
7. Record your new codes on the 'System Information' page (p.25) in this booklet.

PC55XXZ and LCD5501Z Keypads

1. * 5 Master Code.
2. Enter the two-digit number of the access code you want to program (01-32 for access codes, 40 for master code). If an access code already exists for the code number you have selected, it will be replaced by the new code.
3. Enter the new [code]. Access codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. NOTE: Do not use the factory default or obvious codes such as [1111] or [1234].
4. To exit access code programming, press # 3 times.
5. Record your new codes on the "System Information" page in this booklet.

Erasing a code:

1. * 5 Master Code.
2. Enter the number of the code you want to erase [01 to 32]. The Master code cannot be erased.
3. To erase the code, press * once.
4. To exit access code programming, press # 3 times.