


**OPERATING
GUIDE
FOR YOUR
RP1016e KEYPAD**
Bypassing Zones

DESIGN PATS. PENDING

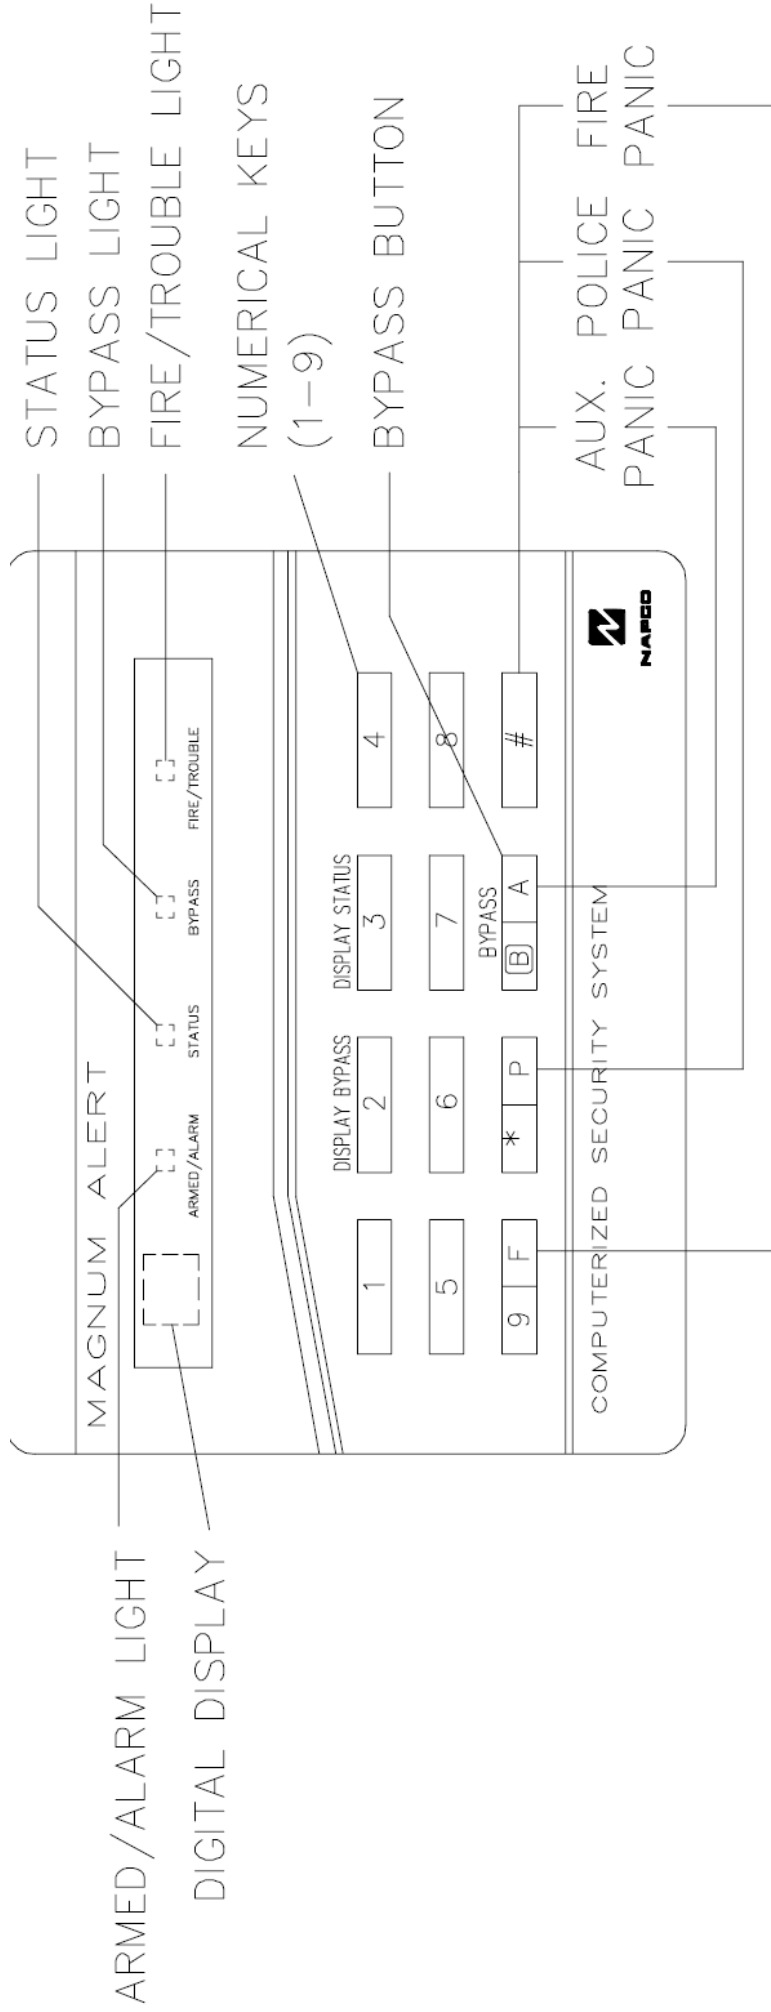



PROTECTING YOURSELF WHILE ON THE PREMISES

Arming with Zones Bypassed

Your alarm specialist may have programmed one or more zones for Selective Bypass, that is, they may be removable from the system. Since a bypassed zone cannot cause an alarm, you may wish to use this feature to turn off the interior areas while armed and keep your perimeter zones (windows, doors, etc.) active.

Press the bypass button (Key [B/A]), then the number of the zone you wish to bypass. The zone number must be entered as a two-digit number, "01" through "14". However, because there is no zero, Key [B/A] is used to represent a "0" when selecting zones, thus Zone "01" is entered as [B/A], [1]; Zone "10" is entered as [1], [B/A]. Check the green light to be sure that no zones are in trouble, then enter your arming code to arm. (To verify which zones have been bypassed, hold down Key [2].) Check the green STATUS light to be sure that no zone is in trouble, then enter your arming code to arm.

Bypassing Interior Zones

Your installer may have also selected all interior zones to be Group Bypass Zones. Bypass these zones all at the same time by simply pressing Key [B/A] three times. The yellow BYPASS light will come on whenever

you bypass one or more zones. Enter your code to arm remaining zones; the green light will go off and the red ARMED/ALARM light will come on. The yellow light will go off the next time you disarm, indicating that the bypassed zones are no longer bypassed. (The BYPASS light does not come on when zones are auto-bypassed (unless programmed otherwise by your alarm specialist.) To review which zones have been bypassed, hold down Key [2] until all bypassed zones have been displayed.


Arming with Instant Protection

Holding down Key [4] (until beep sounds) just before or after arming will cancel the entry delay on the exit/entry zones. The red ARMED/ALARM light will flash rapidly to indicate this condition. After exit time has elapsed, if someone enters through an Exit/Entry Zone, an alarm will sound immediately.

Panic Alarm

(Fire Panic Enabled? YES NO)
(Police Panic Enabled? YES NO)
(Auxiliary Panic Enabled? YES NO)

- To activate a Fire Panic alarm, press Keys [9/F] and [#] at the same time.
- To activate a Police Panic alarm, simultane-

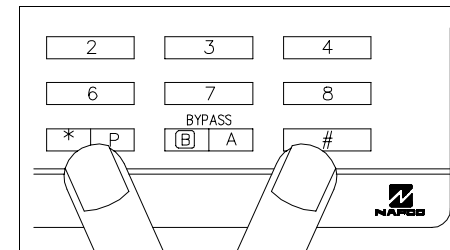

ously press Keys [* / P] and [#].

These features may have been programmed to send an alarm to a central station, activate an audible alarm, or both.

- To activate an Auxiliary Panic alarm, press Keys [B/A] and [#] simultaneously.

This feature is usually a report-only panic. When activated, the keypad will start to pulse and continue until acknowledged by the central station, at which time the sounder will silence.

Note: To silence the sounder before the central-station ringback, arm and disarm the panel.