

INSTRUCTION MANUAL

Date and Time  
Instructions

*Power series*  
*PC 1616*



# Setting the Date and Time

## **Time & Date Programming**

Press **\*6**, plus your Master Access Code or press the time programming function key (programmed by your installer).

Press **1** to select Time and Date.

When using the PK5500/LCD5500, use the **<>** scroll keys to find the menu option and press **\*** to select.

Enter the time in 24-hr format (HH:MM), followed by the date (MM:DD:YY). Press **#** to exit programming.

**NOTE:** *If you have an LCD keypad, your installer may have programmed your system to display the time and date while the keypad is idle. If this is the case, you can press the **#** key to clear the date and time display.*