

INSTRUCTION MANUAL

Code Changes

Ready light ON: system is ready to be armed.

Ready light OFF: open zone. Zone must be closed or bypassed before arming.

Ready light flashing with "Armed" light ON indicates access code 9-16 programming.

Bypass light comes ON when you bypass a zone. To bypass a zone, press [**★**], [1], [Master Code] and then the zone(s) you wish to Bypass. Enter 01 for zone 1; 08 for zone 8; 16 for zone 16. Press [**#**] to return to ready.

Trouble light ON means there is a fault on the system. Press any key to silence keypad beeping. Press [**★**] then [2] to display trouble type; one or more zone lights will come ON to indicate the type of trouble.

- 1 Battery
- 2 A.C. Power
- 3 Day loop
- 4 Telephone line
- 5 Communicator
- 6 Bell circuit
- 7 Smoke detector circuit
- 8 Clock needs resetting

Press [**#**]...

...when an error is made in entering code, then enter code again.

...to return to ready state after using [**★**] commands.

When ON in the normal operating mode, the **Zone Lights** indicate an open zone. eg. open door, window, etc. Refer to zone chart on keypad door for zone information.

Armed light will come ON indicating system is armed. Ensure "Ready" light is ON, enter [4 digit] access code. **Armed** light flashing with "Ready" light indicates access code 9-16 programming.

Memory light ON means an alarm has occurred. To display zone that caused alarm, press [**★**] then [3]. Zone light will come on indicating which zone caused the alarm.

Fire light is ON when a detector on the fire loop is in alarm. Press any key within 30 seconds of first alarm to get 2 minutes to reset smoke detectors.


Press [**F**] for 2 seconds to activate FIRE transmission.

Press [**A**] for 2 seconds to activate an AUXILIARY transmission.

Press [**P**] for 2 seconds to activate PANIC transmission.

THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY INSTALLER.

Colored labels on keypad door indicate which keys are active.

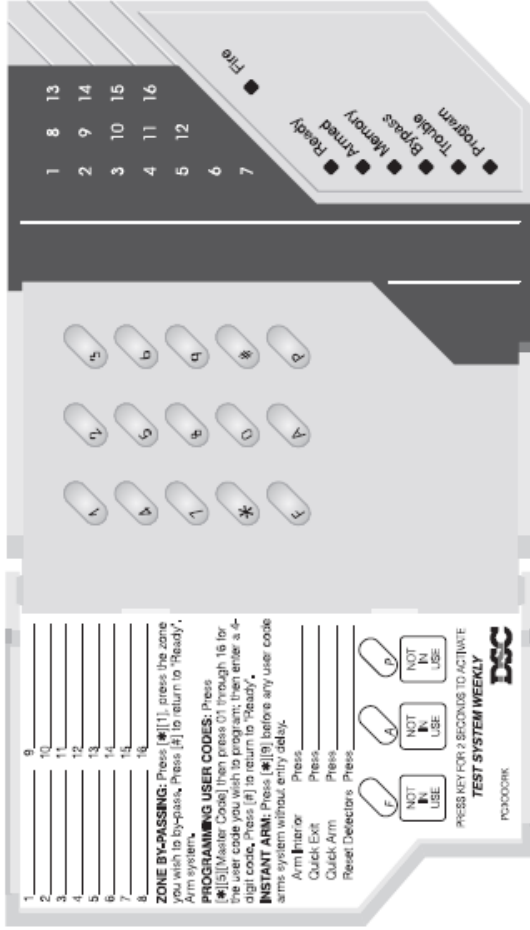

Programming Access Codes

Up to 15 access codes in addition to the Master Code can be entered from the keypad.

Press [*], [5] and [Master Code]. The "Program" light will flash and the zone lights will show which codes have already been programmed. To enter a new code or change an existing code, first press the code number [0] [1] to [1][6] and then enter your [4 digit] code. To erase a code, press [****] instead of a [4 digit] code.

Note that the [*] and [#] keys cannot be used in a code.

Press [#] to return to Ready.