

# INSTRUCTION MANUAL

*Bypassing Zones*



## **Zone Bypassing**

---

Bypassed zones do not cause an alarm. Use zone bypassing when access is needed to part of the protected area. Also, damaged wiring or contacts on a zone may be temporarily bypassed until repairs can be made so that the panel can be armed.

To bypass zones, enter [\*],[1] and the zone numbers to be bypassed. i.e. [0][1] for zone 1, [1][6] for zone 16. If the [0] key is pressed twice instead of a zone number, all zone bypasses will be removed. If the [9] key is pressed twice, the last group of zones which was bypassed will be recalled. Press [#] to return to Ready.

For security reasons, your installer may prevent the bypass command from operating on certain zones. The "Bypass" light is ON as long as at least one zone is bypassed. Do not unintentionally bypass zones when arming. Zone bypasses are automatically cancelled each time the panel is disarmed and must be re-applied before the next arming.