



GE Security

466-2183 Rev B
June 2005

www.gesecurity.com

Part Numbers:

600-1021-95R

600-1022-95R

600-1040

600-1042

Concord 4 Series Security Systems

user guide

Code Changes



<p>Activate a Panic Alarm Press center of button firmly and hold for at least 3 seconds.</p> <p> FIRE EMERGENCY POLICE</p>	<table border="1"> <tr> <td>Off 1</td> <td>Stay 2</td> <td>Away 3</td> </tr> <tr> <td>No Delay 4</td> <td>Silent 5</td> <td>6</td> </tr> <tr> <td>Features 7</td> <td>System 8</td> <td>Menu 9</td> </tr> <tr> <td>Status *</td> <td>Lights 0</td> <td>Bypass #</td> </tr> </table>	Off 1	Stay 2	Away 3	No Delay 4	Silent 5	6	Features 7	System 8	Menu 9	Status *	Lights 0	Bypass #	<p>Arm to AWAY</p> <ol style="list-style-type: none"> 1. Close all doors and windows. 2. Press 3 + CODE. 3. Exit through a delay door. <p>Bypass Sensors</p> <ol style="list-style-type: none"> 1. Arm system to STAY or AWAY. 2. Press 8 + CODE + Sensor Number. <p>Turn CHIME On/Off</p> <ol style="list-style-type: none"> 1. Disarm to OFF. 2. Press 7 + 1. Chime turns on/off. <p>Turn All LIGHTS On/Off</p> <p>Press 0 + 0. Controlled lights turn on/off.</p>
Off 1	Stay 2	Away 3												
No Delay 4	Silent 5	6												
Features 7	System 8	Menu 9												
Status *	Lights 0	Bypass #												
<p>Disarm to OFF/Cancel an Alarm Press 1 + CODE.</p> <p>Arm to STAY</p> <ol style="list-style-type: none"> 1. Close all doors and windows. 2. Press 2 + CODE. 3. If staying, also press 4 (NO DELAY) to make delay doors instant. 														

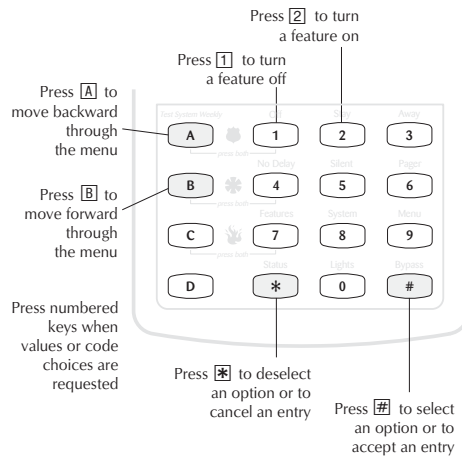


Figure 3. Navigating Through Menus

Examples of Programming Using Menus

Here are two examples of programming using system menus. The examples describe each step involved in programming a user code and in erasing a user code from a fixed display touchpad.

Note

The system will not accept the same code for two different users.

➤ **To change or assign a user access code:**

1. Enter the programming menus by pressing [9] + *System Master Code*.
2. Press [B] until the touchpad displays “USER CODES,” then press [#].
3. Press [B] until the touchpad displays the type of code you wish to change (Regular User codes or System Master code), then press [#].
4. For example, if you want to change a Regular User code, press [#] when the touchpad displays “REG CODES.”
5. Press [B] until the touchpad displays the user code you wish to change, then press [#].

For example, if you want to change Regular User code 2, press [#] when the touchpad displays “REG CODE 02.”

6. Enter the new code and press [#].
7. Press [B]. “BYPASS on/off” appears:
 - Press [1] + [#] to turn the option *off* for this user code.
 - Press [2] + [#] to turn the option *on* for this user code.
8. Press [B]. “TESTS on/off” appears:
 - Press [1] + [#] to turn the option *off* for this user code.
 - Press [2] + [#] to turn the option *on* for this user code.
9. Press [*] + [B] to move to the next user code, or [*] + [4] + [#] to exit programming menus.

➤ **To erase a user code:**

1. Enter the programming menus by pressing [9] + *System Master Code*.
2. Press [B] until the touchpad displays “USER CODES,” then press [#].
3. The touchpad displays “REG CODES.” Press [#].
4. Press [B] until the touchpad displays the user code you wish to erase, then press [#].

For example, if you want to change User code 4, press [#] when the touchpad displays “REG CODE 04,” or “USER 04.”

5. Enter the System Master code you used in Step 1 and press [#]. The deleted code appears as “REG 04 ----”.
6. Press [*] + [B] to move to the next user code, or [*] + [4] + [#] to exit the programming menus.

Note

You cannot delete the System Master Code.