

INSTRUCTION MANUAL

Trouble Lights  
Instructions

*Power series*  
*PC 1000*



## **TROUBLE DISPLAY**

The control panel continuously monitors a number of possible trouble conditions. If one of these conditions occurs, the keypad sounder will beep and the keypad "System" indicator will come ON. Press the [\*] then [2] keys to display the type of trouble. The zone lights indicate the type of trouble condition.

<b>ZONE LIGHT</b>	<b>TROUBLE</b>
1	Low Stand-by Battery
2	AC Power Failure (see note below)
3	Zone 4 Emergency Circuit Trouble
4	Unsuccessful Communication Attempt with Monitoring Station

Press the [#] key to return to Ready.

**NOTE:** The keypad buzzer will not sound for AC failure until there is also a low battery condition. The "System" light will come ON as soon as AC fails and will remain on until AC restores.

## **ALARM MEMORY DISPLAY**

If an alarm occurred during the last armed period, the "System" light will be ON.

Press the [\*] then [3] keys to display the zone(s) which caused the alarm.

Press [#] to return to Ready.

## **ALARM TEST**

Press [\*] then [4] for a 2 second test of the keypad lights, keypad sounder and the bell/siren alarm.