

INSTRUCTION MANUAL

Bypassing Zones
Instructions

Power series
PC 1000



ZONE BYPASSING

Bypassed zones do not cause an alarm. Use zone bypassing when access is needed to part of the protected area. Also, damaged wiring or contacts on a zone may be temporarily bypassed until repairs can be made so that the panel can be armed.

To bypass zones, enter [*],[1] and the zone number(s) to be bypassed (i.e. [1] for zone 1, [2] for zone 2). To remove all bypasses, enter [*],[1],[0]. The zone lights which are ON indicate bypassed zones. Press [#] to return to Ready.

When the system is installed, the ability to bypass certain zones may be eliminated for security reasons. In this case, the zone lights for those zones will not come on in response to the bypass command.

The "System" light is ON as long as at least ONE zone is bypassed. Do not unintentionally bypass zones when arming. Programmed zone bypasses are automatically cancelled each time the panel is disarmed and must be re-applied before the next arming.