


# Instruction Manual

*Code Changes*

## PC1500/PC1550

### • W A R N I N G •

This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.

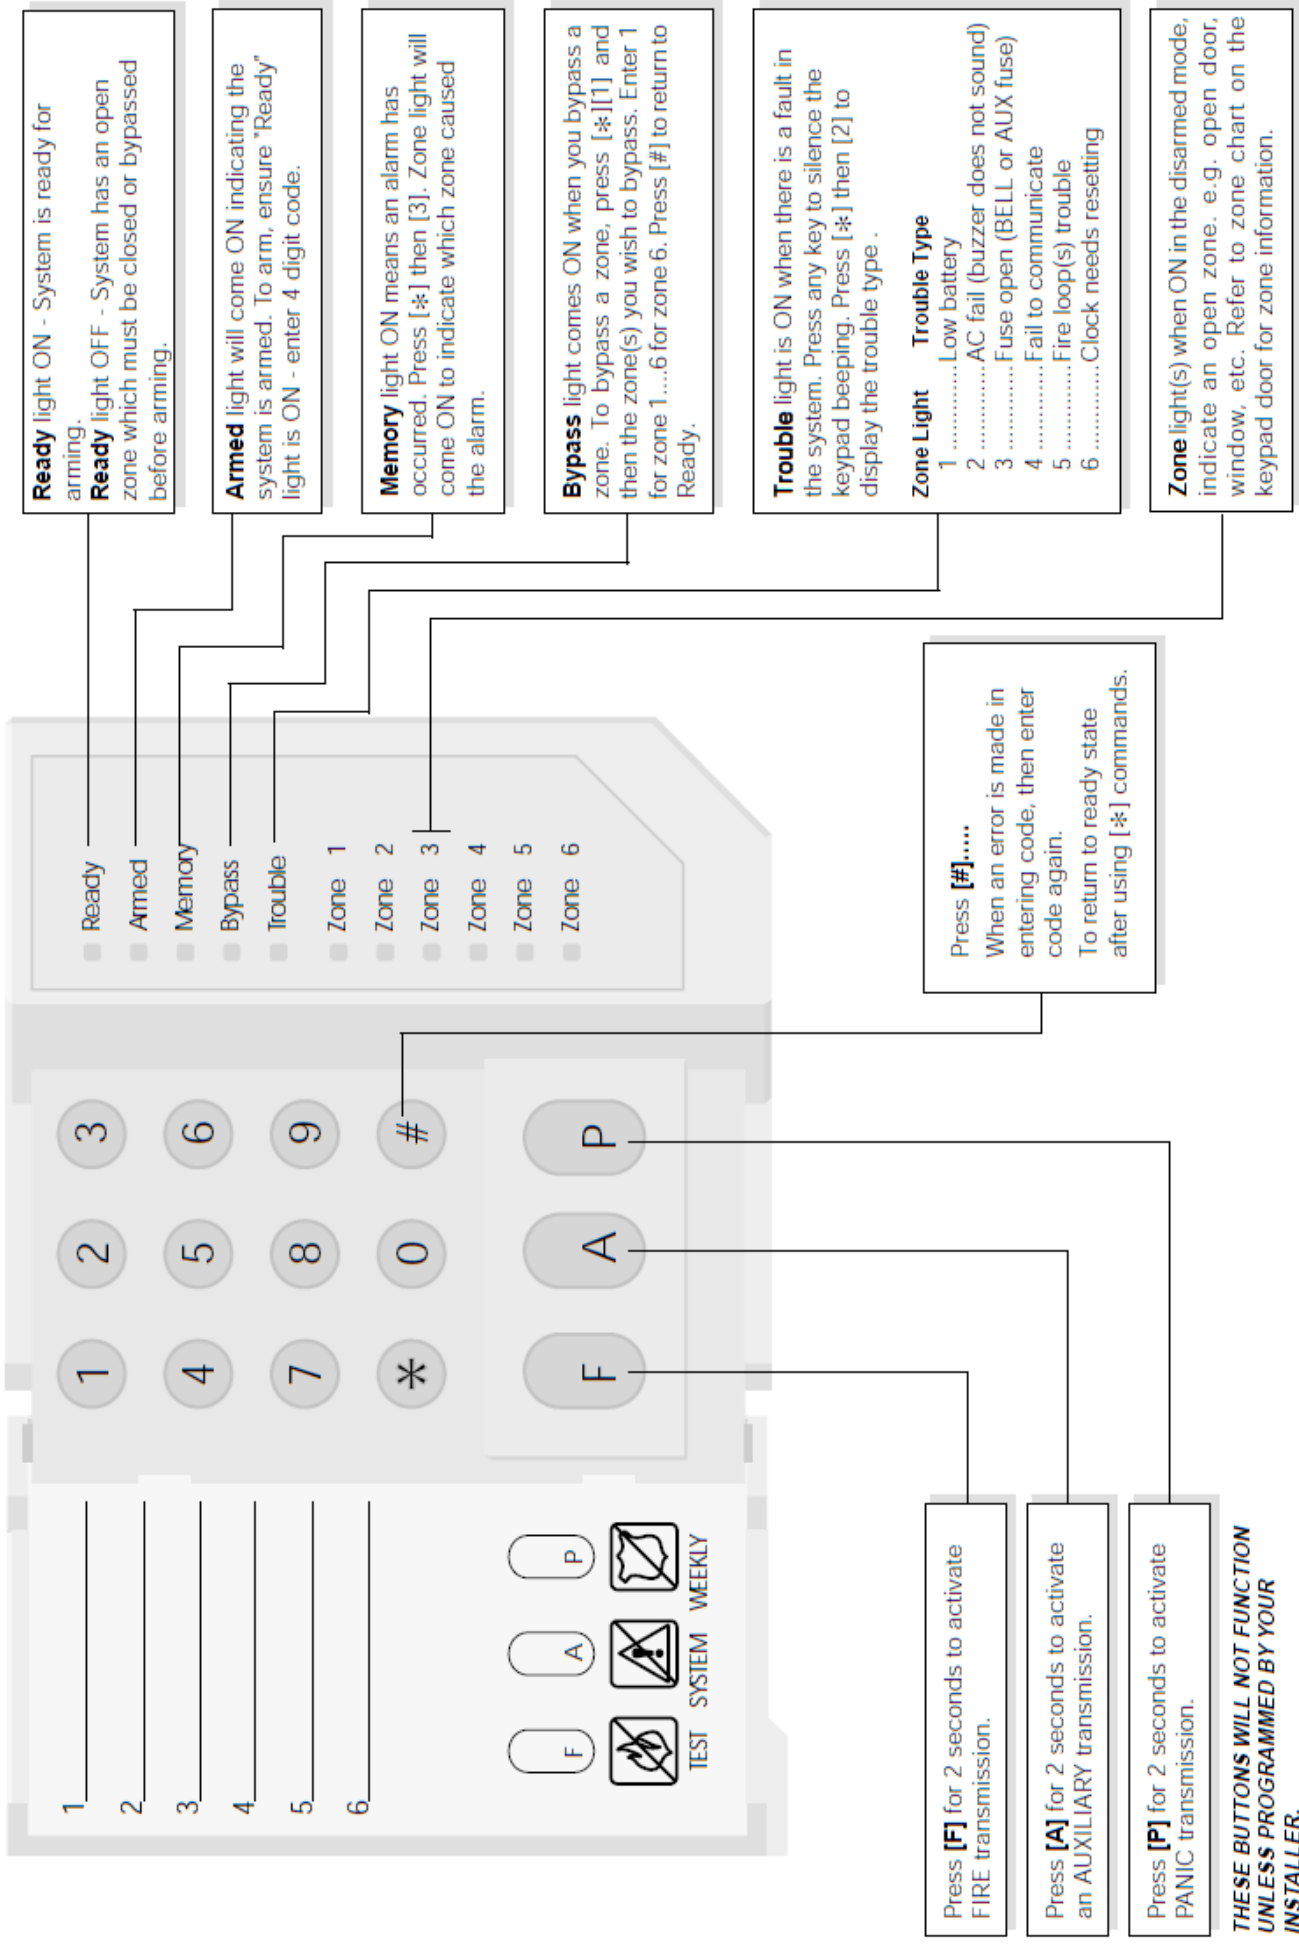

# Programming Security Codes

---

## The Master Code

Enter [\*][5][current Master Code][1][new Master Code]

Press [#] to return to ready

Record your new Master Code on the System Information page in this booklet.

## Additional Codes

Up to 5 additional access codes (2 through 6) may be programmed. The 6th access code may be established by your installer as a One-Time use code.

### To program a new code:

Enter [\*][5][Master Code][code number 1 to 6][new 4 digit code]

The [code number] is a single digit either 2, 3, 4, 5 or 6.

Press [#] to return to Ready.

If an access code already exists, it will be replaced by the new code.

### To remove a code:

Enter [\*][5][Master Code][code number][\*\*\*\*]

The [code number] is a single digit either 2, 3, 4, 5 or 6.

Press [#] to return to Ready.

Do not erase the Master Code (code number 1).

NOTE: It is recommended that the factory default Master Code [1234] not be used.