


Instruction Manual

Bypassing Zones

PC1500/PC1550

• W A R N I N G •

This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.

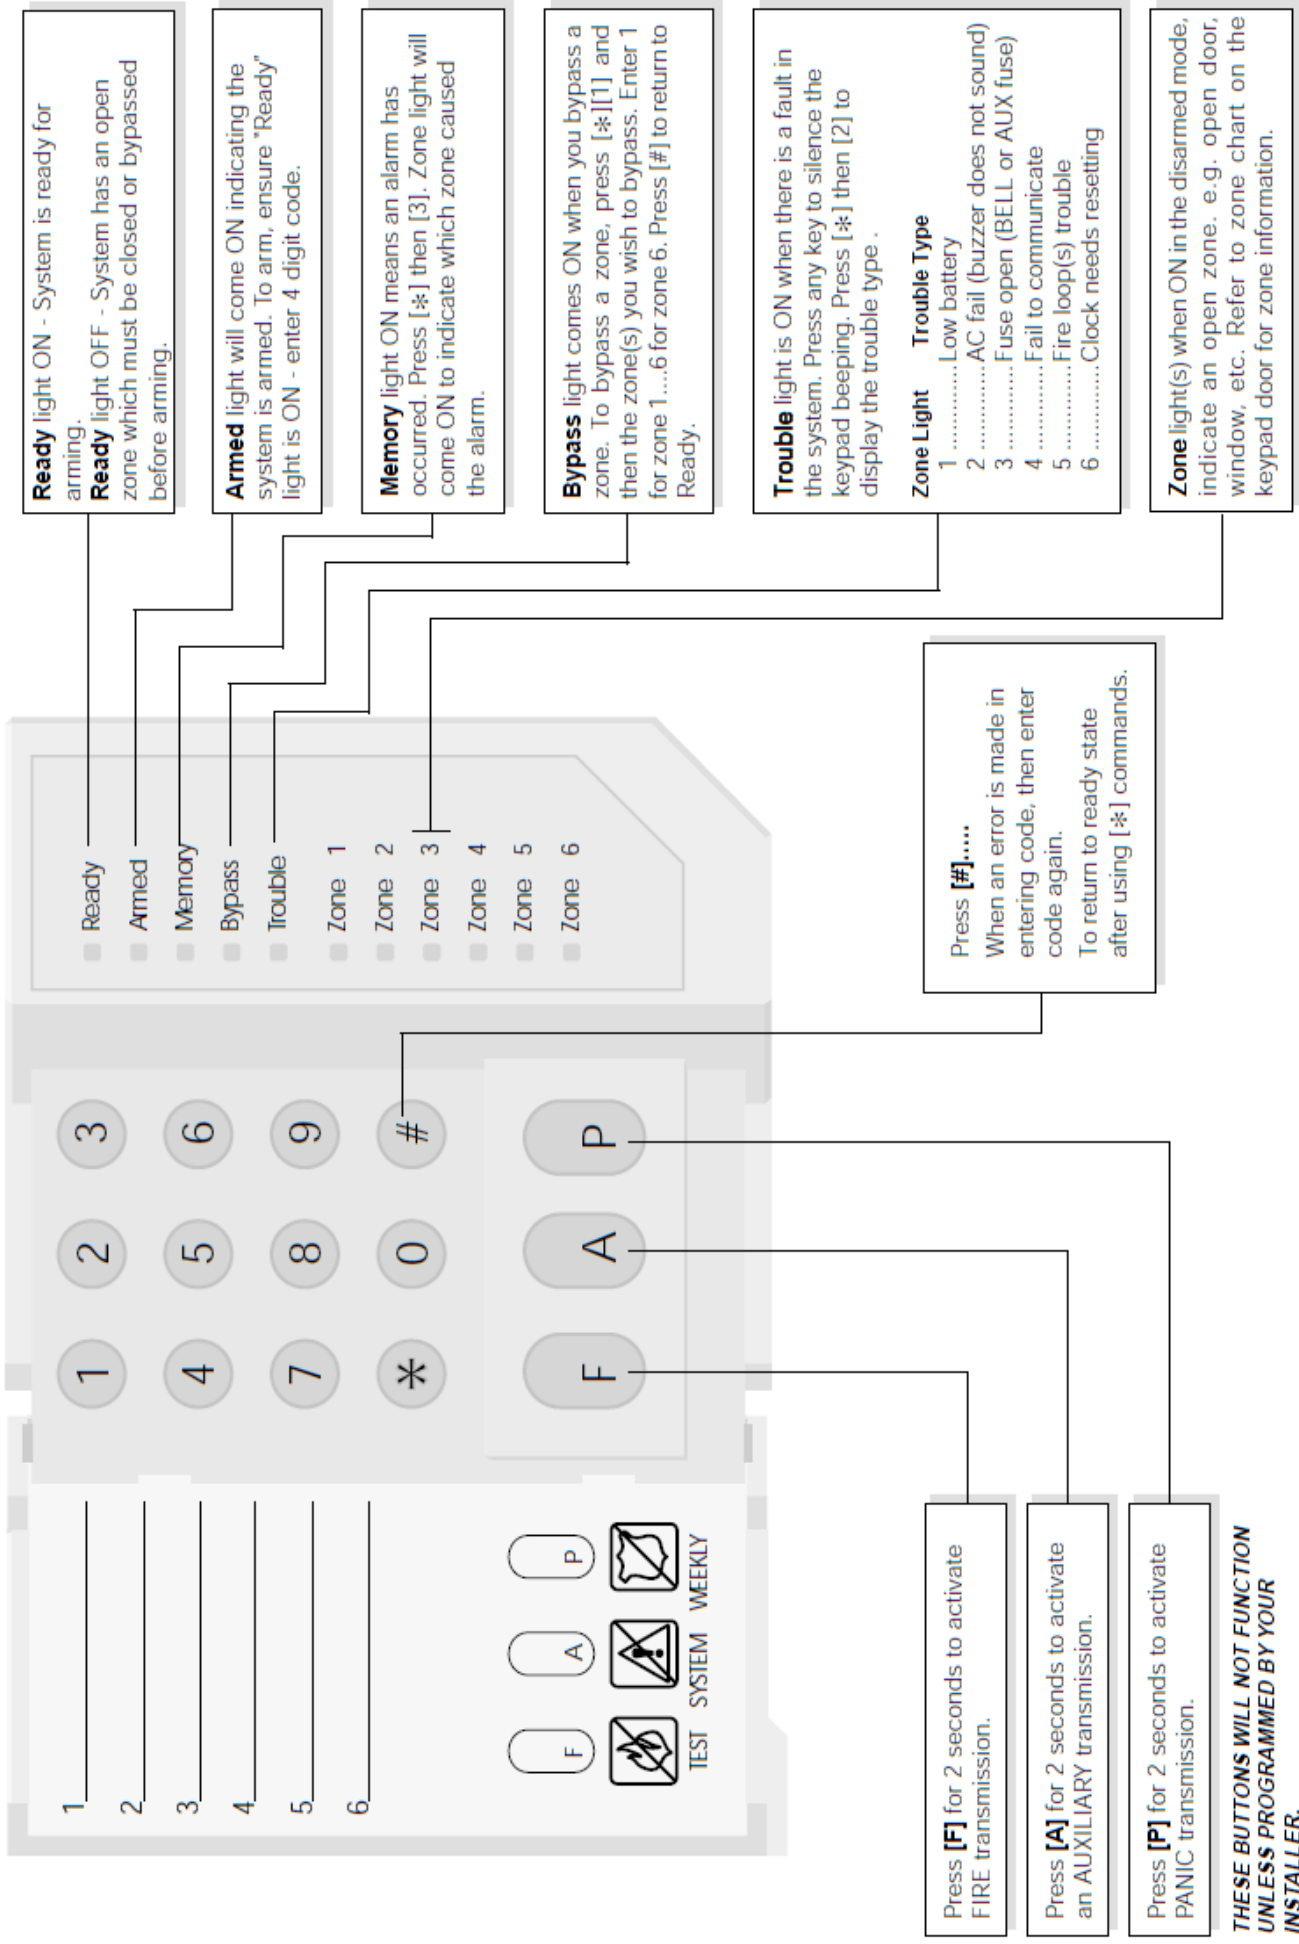

Ready light ON - System is ready for arming.
Ready light OFF - System has an open zone which must be closed or bypassed before arming.

Armed light will come ON indicating the system is armed. To arm, ensure "Ready" light is ON - enter 4 digit code.

Memory light ON means an alarm has occurred. Press [*] then [3]. Zone light will come ON to indicate which zone caused the alarm.

Bypass light comes ON when you bypass a zone. To bypass a zone, press [*][1] and then the zone(s) you wish to bypass. Enter 1 for zone 1....6 for zone 6. Press [#] to return to Ready.

Trouble light is ON when there is a fault in the system. Press any key to silence the keypad beeping. Press [*] then [2] to display the trouble type .

Zone Light	Trouble Type
1 Low battery
2 AC fail (buzzer does not sound)
3 Fuse open (BELL or AUX fuse)
4 Fail to communicate
5 Fire loop(s) trouble
6 Clock needs resetting

Zone light(s) when ON in the disarmed mode, indicate an open zone. e.g. open door, window, etc. Refer to zone chart on the keypad door for zone information.

- Ready
- Armed
- Memory
- Bypass
- Trouble
- Zone 1
- Zone 2
- Zone 3
- Zone 4
- Zone 5
- Zone 6

Press [#],....
 When an error is made in entering code, then enter code again.
 To return to ready state after using [*] commands.

Press **[F]** for 2 seconds to activate FIRE transmission.

Press **[A]** for 2 seconds to activate an AUXILIARY transmission.

Press **[P]** for 2 seconds to activate PANIC transmission.

THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY YOUR INSTALLER.

To bypass zones:

Enter [*][1][Zone number(s) to be bypassed]

Enter zone number(s) as single digits (1-6).

As each zone is bypassed, the zone light will come ON. If a zone is bypassed in error, press that zone number again and the zone light will go OFF indicating that the zone is not bypassed.

Press [#] to return to Ready.

To recall last group of zones bypassed:

Enter [*][1][9]

Zone lights for the last group of zones bypassed will come ON to show which zones are bypassed. If you wish to add or delete a zone from the group, press [#] to exit then go to zone bypass as described above.

Press [#] to return to Ready.

For security reasons, your installer may prevent the bypass command from working on certain zones. The “By-pass” light is ON as long as ONE or more zones are bypassed. Do not unintentionally arm the system with zones bypassed. Zone bypasses are automatically cancelled each time the system is disarmed and must be re-applied before the next arming.