


Instruction
Manual

Troubleshooting

PC550

With PC500RK Keypad

DSCTM
Security Products

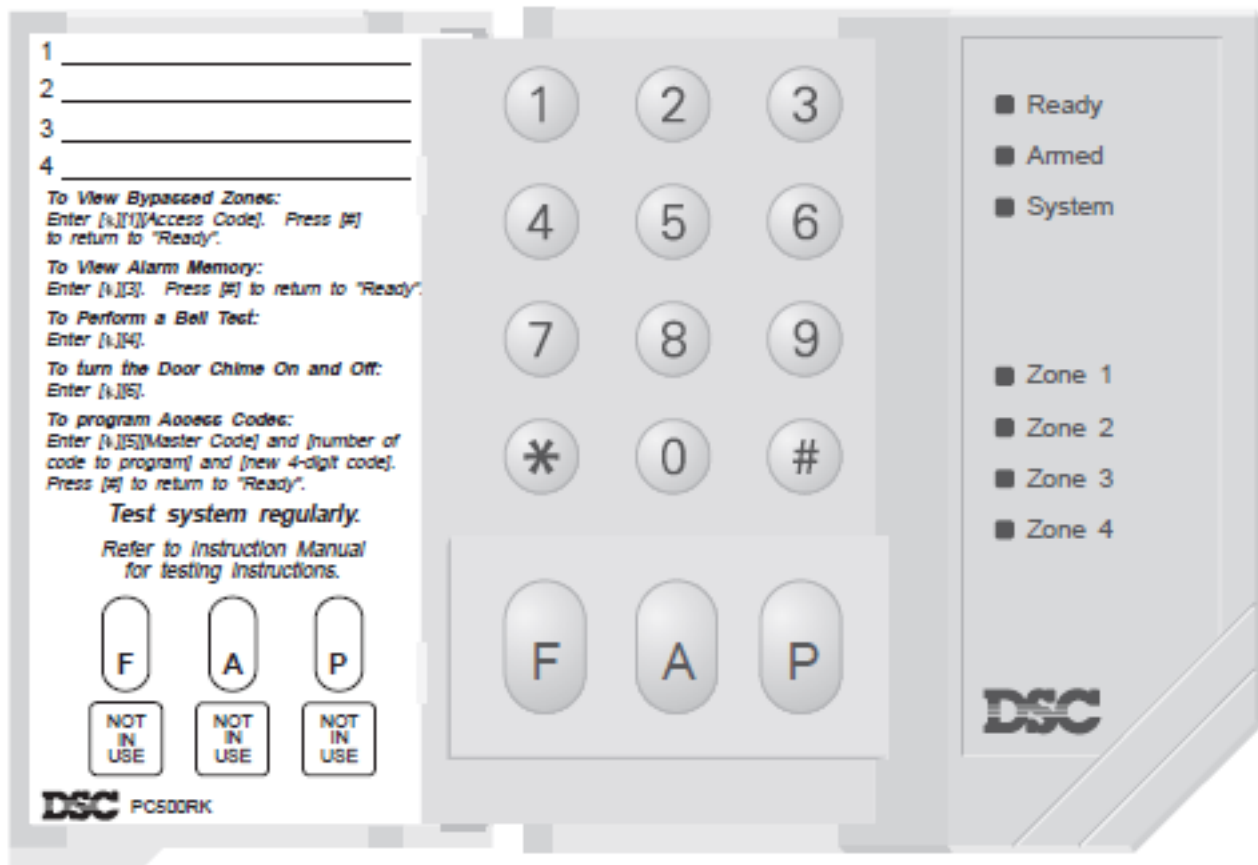

The “System” light will come ON to indicate:

- that zones are bypassed
- there is a trouble condition on the system
- there are alarms in memory.

Use the [*][2] command to display any trouble conditions; be sure to have trouble conditions corrected by your installer as soon as possible.

Display Alarm Memory

Alarms generated when the system is armed are recorded in the system’s memory. To display the zones that went into alarm, enter [*][3]. The “System” light will FLASH, and the zones that went into alarm will be displayed on the flashing Zone Lights. Note that the Alarm Memory will be cleared the next time the system is armed.

Display Trouble Conditions

The PC550 constantly monitors itself to ensure proper operation. When a condition occurs that could affect operation, the “System” light will come ON and the keypad will sound two short beeps every 10 seconds to warn of the trouble condition.

To silence the sounder, press the [#] Key. The keypad will be silenced, but the “System” light will remain ON until the trouble condition is cleared.

To display the trouble conditions, enter [*][2]. Trouble conditions are represented with the Zone Lights; if a Zone Light comes ON, then that trouble condition is present:

Zone Light	Trouble	Cause	What To Do
1	Battery Trouble	Battery is low or disconnected	Call for service
2	AC Failure	AC power is out	Check your fusebox or circuit breakers; call for service if the trouble condition cannot be corrected
3	Fire Trouble	-----	Call for service immediately
4	Communications Trouble	System cannot communicate with monitoring station	Call for service if trouble does not correct itself

Note that the keypad sounder will not beep if only the AC Failure trouble is present.