

Turning The System ON (cont)

NOTE: This system can be programmed by the installer for the **AUTO-STAY** feature which automatically bypasses interior zones if you arm the system and do not exit through a delay zone during exit time.

TO TURN SYSTEM ON IN INSTANT MODE

In **INSTANT** mode, all alarm sensors, including those on doors and windows, will report an alarm immediately if activated. Check to make sure the system is ready to be armed (no faulted zones). When it is ready, press:

INSTANT followed by your user code.

When the system has been turned ON successfully, the ON/OFF light and the Instant light will be ON, or the LCD will display:

ON: INSTANT

TO BYPASS A ZONE

The Bypass function excludes a zone of protection from the security system until it is unbypassed (either by using the unbypass procedure or when you turn the system OFF). Bypassing can only be done while the system is turned OFF.

Press the **BYPASS** button. Then enter your user code and the zone number (1-7) to be bypassed, as follows:

BYPASS followed by your user code[†] + **ZONE #**

[†] If the Quick Bypass feature has been enabled by the installer, the user code is not required when bypassing zones.

NOTE: Bypassed zones are **NOT** protected when the system is turned ON. After the bypass command has been accepted, the keypad will sound one long beep, and the zone LED of the zone(s) bypassed will slowly blink, or the LCD will display:

BYPASS ZONE 01
FRONT DOOR

IMPORTANT: Temporary users (i.e., baby sitters, housekeepers, etc.) should not be shown the Bypass procedure.

TO UNBYPASS A ZONE

Pressing the **BYPASS** button returns a bypassed zone to normal operation. To unbypass a zone(s), repeat the bypass function as follows:

BYPASS followed by your user code + **ZONE #**.

After unbypassing, the zone display will show the state of the zones.