

User Codes

TO ADD OR CHANGE A USER CODE

Users can be added or changed directly at the keypad. Your system can have up to 15 different user codes. Users #1 and #2 are the only users allowed to add or delete other user codes.

To add or change a user code, press the **CODE** button followed by user #1 or user #2 of the 4-digit user code. Then enter the new user number and the new 4-digit user code. The keypad will beep after each digit is pressed.

	User #1 or #2 Code	User ID	New User Code
CODE	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	nn	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Use the system reference sheet to record system users. On this sheet your installer will indicate if you have chosen to dedicate a user code to send an emergency Ambush or Duress signal. You may also have chosen to reserve one user code that is only allowed to turn the system ON. This code will **NOT** be able to turn the system OFF.

TO DELETE A USER CODE

To delete a user, press the Code button followed by the 4-digit master user code. Enter the the user number, then press [#] to delete. For example, to delete user 3, do the following:

	Master User Code	User ID	# to delete
CODE	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	03	#

NOTE: User #1, the master user, cannot be deleted but it can be changed using the ADD OR CHANGE user procedure.

THE ARM-ONLY CODE (Maid Code)

If you choose to have a code that cannot turn the system OFF, but can turn the system ON, have your installer program this feature. If programmed, user code 5 will have System ON capability only, and you can issue this code to a temporary user so he can secure the premises when he leaves.