

Miscellaneous Commands (cont)

TURN CHIME ON/OFF

Chime is an optional feature that causes the keypad to chime when selected doors are opened while the burglary protection is OFF or disarmed.

Only your installer can program a zone for the Chime feature. Once programmed, you can turn Chime ON or OFF to meet your daily needs.
To turn Chime ON or OFF: Press [#] [6].

SET AUTO ARM ON TIME

Setting Auto Arm ON time lets you set the time of day your system will automatically turn ON.

To activate Set Auto Arm ON time: Press [#] [5] [hour] [minute]. The two digit settings for hours and minutes are in the 24-hour format. Example: 7AM=07; 3PM=15. Set minutes the same way: 5min=05; 25min=25.

The readout keypad will prompt you for the required entries.

DOOR STRIKE

Door strikes are used in access control applications. To activate door strikes:

Press [#] [9] [User Code] [Door #]
where the door number is as follows:

1 _____
2 _____

NOTE: User 13 is the only user code that can perform the door strike function.

VIEW TIME

To view the time, press: [#] [7].

CURRENT TIME: 08:15AM

SET TIME

To set the time and date, press: [#] [3] [user 1 or 2 code] [hr₁] [hr₂] [min₁] [min₂]
[mnth₁] [mnth₂] [day₁] [day₂] [year₁] [year₂]

(The user code is not required if so programmed by installer.)

TO VIEW AUTO ARM ON TIME

To view the auto arm time, press: [#] [8] [user 1 or 2 code].

AUTOARM TIME: 05:00PM

(The user code is not required if so programmed by installer.)