

## User Programming Menu Items

This section guides you through the user programming menu items.

There are two tiers of user programming menus. Tier 1 menus are accessible immediately after entering the program mode.

Pressing ▼ advances forward through the menus. Pressing ▲ moves through the menus in reverse. See “Panel Keypad Button Programming Functions” on page 6 for more information on navigating through programming menus.

### Entering User Programming Mode

You can enter user programming mode using the primary access code. The default primary access code is 1234.

➤ **To enter user programming mode:**

- ◆ With the system disarmed, press 8 + code. This will take you to CODES, the first menu item in Tier 1.

### Codes (1st Tier)

The CODES menu lets you define security codes for the Allegro system. The CODES menu contains the following 2nd tier menus, or codes:

- MANAGER
- MAINTENANCE
- PRIMARY
- USER, 2, 3, 4

**Note**

This code will only be displayed in user programming if the manager code was used to enter user program mode.

<b>MANAGER (2nd Tier)</b>	<b>(CODES—)</b>
<i>(Default = none, Parameters = 4 digits, 0 to 9)</i>	
The manager code functions the same as the primary code within the user programming menu, and can arm or disarm the system.	
➤ <b>To program/change Manager Code:</b>	
1. Enter the manager code. The display shows CODES.	
2. Press #. The display shows MANAGER.	
3. Press # to display the current code (if any).	
4. Press #, enter the desired code and then press #.	
➤ <b>To delete Manager Code</b>	
◆ Press # twice. Once to delete the code and again to accept the command.	
<b>MAINTANANCE CODE (2nd Tier)</b>	<b>(CODES—)</b>
<i>(Default = none, Parameters = 4 digits, 0 to 9)</i>	
The maintenance code is to be used in conjunction with the apartment manager keychain touchpad. When a maintenance person needs access to a site protected by an Allegro, he can press disarm on the apartment manager keychain touchpad, enter the premises, then enter the maintenance code at the panel to disarm the system.	
➤ <b>To set the Maintenance Code:</b>	
◆ Press #, enter the desired code and then press #.	
➤ <b>To delete Maintenance Code</b>	
◆ Press # twice. Once to delete the code and again to accept the command.	

**Note**

This code will only be displayed in user programming if the manager code was used to enter user program mode.

<b>PRIMARY (2nd Tier)</b>	(CODES—)
<i>(Default = 1234, Parameters = 4 digits, 0 to 9)</i>	
The primary code performs all system operations and user programming.	
➤ <b>To set the Primary Code:</b>	
1. Press # to display the current code.	
2. Press #, enter the desired code and then press #.	
<b>USER 2, 3, 4 (2nd Tier)</b>	(CODES—)
<i>(Default = none, Parameters = 4 digits, 0 to 9)</i>	
User Codes performs arming and disarming functions. The user codes cannot directly bypass sensors or program the primary code. The system allows up to 3 user codes (user 2 - 4).	
➤ <b>To program/change User 2, 3, 4 Code:</b>	
1. Press # to display the current user code (if any).	
2. Press #, enter the desired user code and then press #.	
➤ <b>To delete User 2, 3, 4 Code</b>	
◆ Press # twice. Once to delete the code and again to accept the command.	

<b>TIME (1st Tier)</b>	(TIME—)
<i>(Default = 12:00 am, Parameters = 12:00 am to 11:59 pm)</i>	
This setting lets you adjust the panel's clock to the correct time. The panel uses a 12-hour clock.	
➤ <b>To set the time:</b>	
1. Press # to display the time.	
2. Enter the current time using numbered keys.	
3. Use the arrow keys to select AM or PM.	
4. Press #.	

<b>PHONE TEST (1st Tier)</b>	(PHONE TEST—)
This setting lets you perform a manual phone test to check the phone communication between the panel and the central monitoring station.	
➤ <b>To perform a phone test:</b>	
◆ Press # to initiate a phone test. The panel will indicate if the test was successful or not.	

**Note**  
The DTIM and phone number must be programmed before the panel will display the Phone Test option.