

<b>PRIMARY (2nd Tier)</b>	(CODES—)
<i>(Default = 1234, Parameters = 4 digits, 0 to 9)</i>	
The primary code performs all system operations and user programming.	
➤ <b>To set the Primary Code:</b>	
1. Press # to display the current code.	
2. Press #, enter the desired code and then press #.	
<b>USER 2, 3, 4 (2nd Tier)</b>	(CODES—)
<i>(Default = none, Parameters = 4 digits, 0 to 9)</i>	
User Codes performs arming and disarming functions. The user codes cannot directly bypass sensors or program the primary code. The system allows up to 3 user codes (user 2 - 4).	
➤ <b>To program/change User 2, 3, 4 Code:</b>	
1. Press # to display the current user code (if any).	
2. Press #, enter the desired user code and then press #.	
➤ <b>To delete User 2, 3, 4 Code</b>	
◆ Press # twice. Once to delete the code and again to accept the command.	

<b>TIME (1st Tier)</b>	(TIME—)
<i>(Default = 12:00 am, Parameters = 12:00 am to 11:59 pm)</i>	
This setting lets you adjust the panel's clock to the correct time. The panel uses a 12-hour clock.	
➤ <b>To set the time:</b>	
1. Press # to display the time.	
2. Enter the current time using numbered keys.	
3. Use the arrow keys to select AM or PM.	
4. Press #.	

<b>PHONE TEST (1st Tier)</b>	(PHONE TEST—)
This setting lets you perform a manual phone test to check the phone communication between the panel and the central monitoring station.	
➤ <b>To perform a phone test:</b>	
◆ Press # to initiate a phone test. The panel will indicate if the test was successful or not.	

**Note**  
The DTIM and phone number must be programmed before the panel will display the Phone Test option.