


How to Use Your Security System

BYPASSING ZONES



Z1100 User Manual

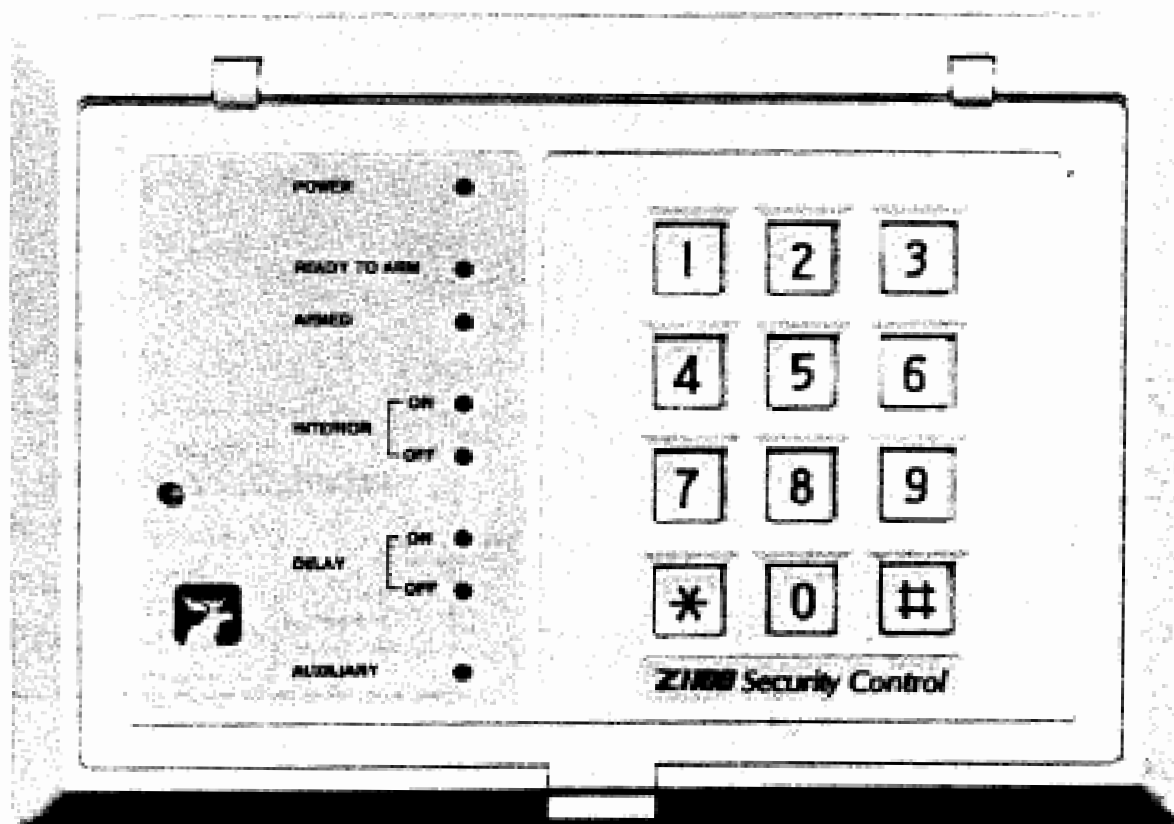

Zone Bypassing (Shunting)

The SHUNT key is used to bypass selected zone(s) in your system. A bypassed zone will NOT cause an alarm, since it is temporarily removed from your system. Bypassing a zone is usually done for one of two reasons. First, you may want to arm most of the system but leave one zone disarmed because of use or traffic. Second, if a zone is defective for some reason you may bypass that zone and still arm the system so that you can have limited protection until the problem zone is repaired.

To Bypass A Zone

1. The system must be disarmed.
2. Press the SHUNT command and the number corresponding to the zone to be bypassed. The zone locations are labeled on the inside of the control station.
3. The READY light will start to blink.

To Remove Bypassed Zone(s)

1. The system must be disarmed.
2. Press the SHUNT command and [*] which clears all bypassed zones.
3. The READY light will stop blinking.