

Moose Z700 Trouble Light

If the keypad is beeping press "*" to reset the system. If the trouble light is on press and hold "2" for three seconds to display the trouble condition. This will identify the trouble conditions. The LED's will light to indicate the exact trouble for the panel. They are as follows:

Trouble LED's	Trouble Condition
ZONE 1	AC Power Failure = Check to see if transformer is plugged into receptacle
ZONE 2	Low Battery/Blown Fuse = Replace panel battery and verify Fuses are still good
ZONE 3	Supervisory/Trouble = Zone is shorted or open, check EOL resistor
ZONE 4	Fail to Communicate = Check alarm panel phone line
ZONE 5	Memory Error = Call for service
ZONE 6	Missing Keypad = Check wiring to all keypads
ALARM	Chime is on
READY	Interior zones are OFF
ARMED	Entry delay is OFF