


SECURITY

SYSTEM


OWNER'S

MANUAL

***BYPASSING
ZONES***

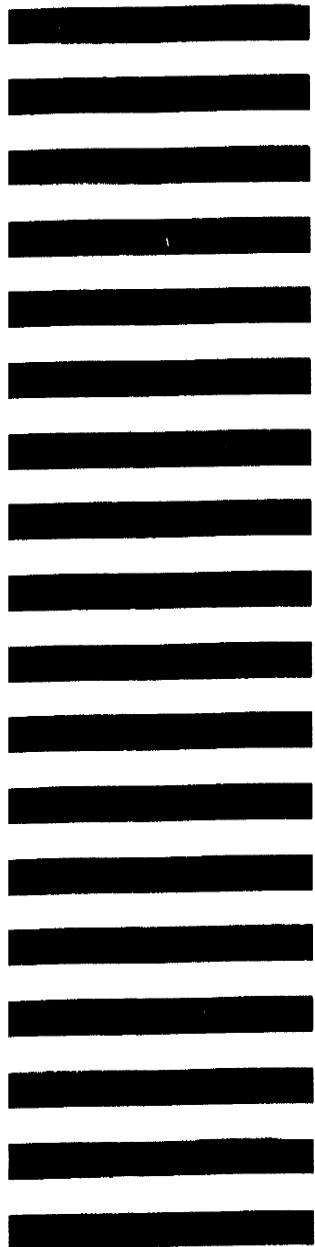

**RF
Commander**  [®]

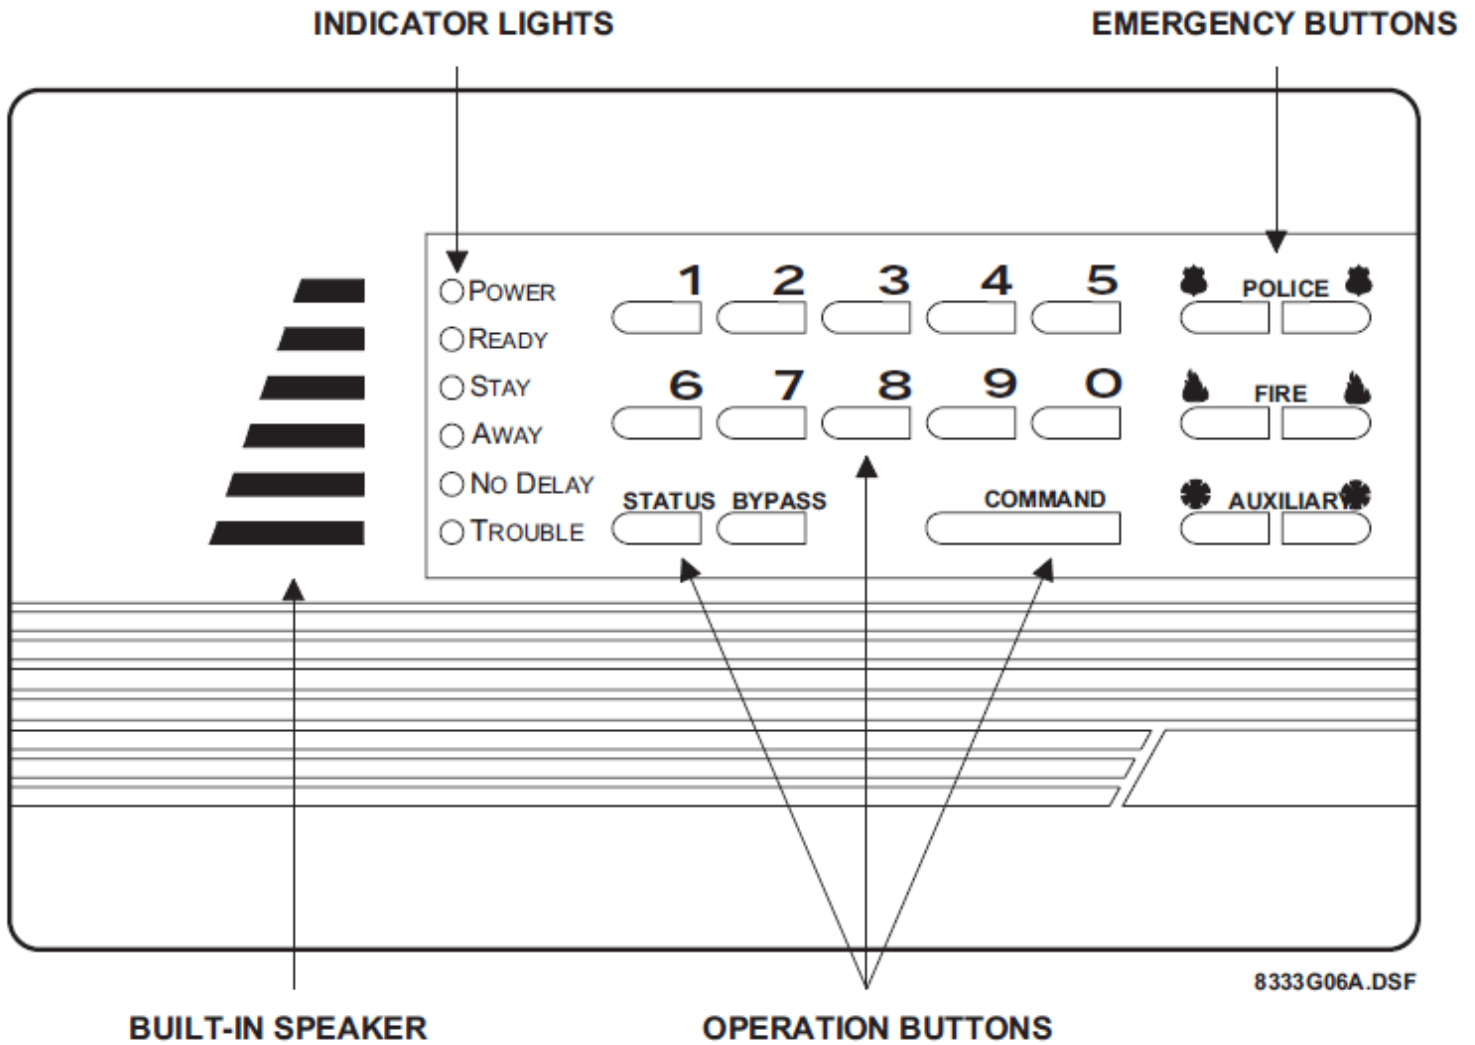

BYPASSING ZONES

Bypass Button (Located behind Control Panel)

Used to bypass open/protesting sensors. For example, if you enter CODE + 3 and sensor 07 is open, the Control Panel speaker will announce "SENSOR SEVEN OPEN" and then emit a series of protest beeps. Press BYPASS within the exit time delay period and the panel will announce "ALARM SYSTEM IS ON LEVEL THREE, SENSOR SEVEN BYPASSED."

CODE + BYPASS + SENSOR NUMBER

You can selectively bypass sensors using this procedure. For example, to bypass sensor five you would enter the following after arming the system: CODE + BYPASS + 05. The Control Panel will respond with the voice message "SENSOR ZERO FIVE BYPASSED".