


**OPERATING  
GUIDE  
FOR YOUR  
RP1000eLCD KEYPAD**  
*Bypassing Zones*

DESIGN PATS. PENDING



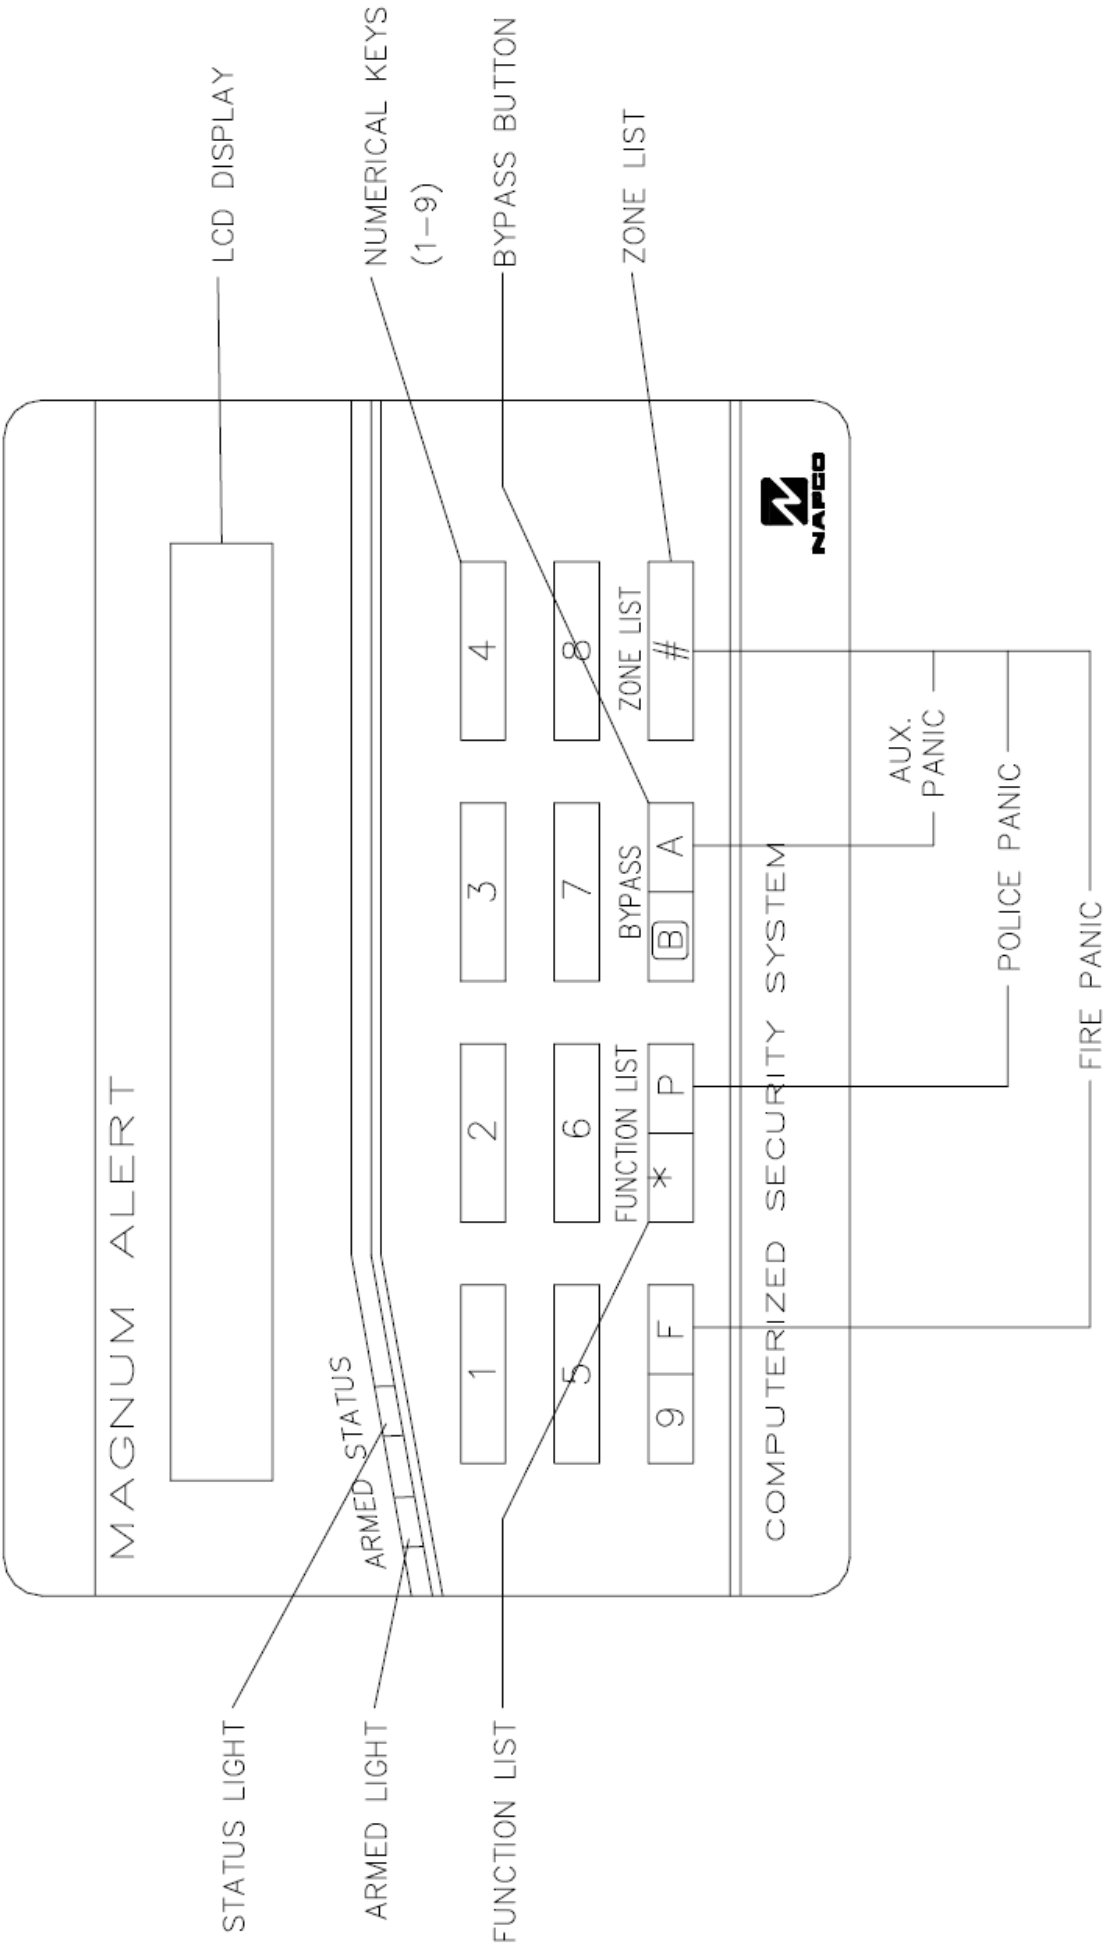

MAGNUM ALERT

STATUS LIGHT

LCD DISPLAY

ARMED LIGHT

ARMED STATUS

NUMERICAL KEYS  
(1-9)

FUNCTION LIST

BYPASS BUTTON

FUNCTION LIST

ZONE LIST

ZONE LIST

BYPASS

ZONE LIST

#

9

\*

B

8

F

P

A

7

6

2

3

4

COMPUTERIZED SECURITY SYSTEM

NAPCO

AUX.  
PANIC

POLICE PANIC

FIRE PANIC

## PROTECTING YOURSELF WHILE ON THE PREMISES

### Bypassing Interior Zones

Your alarm specialist may have selected all interior zones (space-protection devices, interior doors or windows, etc., but not exterior doors or windows) to be Group-Bypass Zones. These zones may be bypassed as a group in order to allow freedom of movement on the premises while arming with perimeter protection. Check that the keypad display reads \*SYSTEM READY\* (or other customized message. To turn off all interior zones simultaneously (programmable option), secure all exterior doors and windows, then press Key [B] twice (**three times** for MA1016 Series). (The keypad will beep and "BYPASS" will be displayed to indicate that at least one zone is being bypassed from the system.)

**Note:** (1) Except in the MA854 and MA1016 Series, the Watch Mode may have been programmed to activate when group-bypassing zones (ask your alarm specialist). (2) Group-Bypass Zones may not be programmed for UL installations.

### Arming the System While on the Premises

When interior zones have been bypassed (see **Bypassing Interior Zones**, above) you may set the alarm with perimeter protection only: enter your Arm/Disarm Code. The

ARMED light will go on and the display will read \*\*\*\*\*ARMED\*\*\*\*\*. Entry through any exterior door or window will cause an immediate alarm, except through the regular entry door, which is still subject to the usual entry delay.

**Note:** When the system is subsequently disarmed, bypassed interior zones will revert to regular disarmed zones.

### Arming With Instant Protection


To cancel the entry delay while on the premises, hold down Key [4] until the function beep sounds (about 2 seconds). (Note that exit delay will still remain in effect to allow exiting while others remain on the premises.) The display will now read \*\*\*\*\*ARMED\*\*I, and the red ARMED light will flicker rapidly, indicating armed with Instant Protection. Remember that opening the entry door (after exit delay has expired) will cause an instant alarm!

**Note:** When the system is subsequently disarmed, entry delay will be restored.

### Emergency (Panic) Buttons

The three buttons [F], [P], and [A] are each used with the [#] button to signal a Fire, Police or Auxiliary emergency. This option may have been programmed by your alarm specialist to signal a central station, sound an audible alarm, or both. **Note:** Check with your

installer to find out if the Emergency Buttons have been disabled. The emergency signal will only be activated when both buttons are pressed at the same time, as follows:

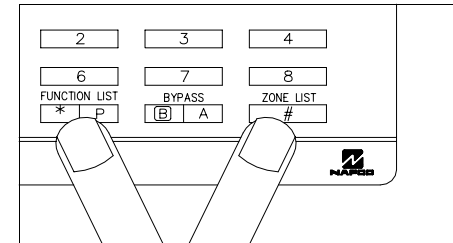

- To signal a Fire emergency, press Keys [F] and [#] at the same time.
- To signal a Police emergency, press Keys [P] and [#] at the same time.
- To signal an Auxiliary emergency, press Keys [A] and [#] at the same time.

**Note:** An Auxiliary emergency is a silent "report-only" alert. When an Auxiliary emergency is activated, the keypad sounder will start pulsing and will continue to pulse until the central station acknowledges with a long "ringback" tone.