

# OPERATING GUIDE FOR YOUR RP1000eLCD KEYPAD


*Code Changes*

DESIGN PATS. PENDING



1. Hold down Key [8] until the sounder beeps. This puts the system into the User Program Mode.
2. Enter your Program Code into the keypad; the keypad lights will flash and sounder will pulse.
3. Press Key [BA] \*.
4. Enter the user number. For MA1016-Series systems, enter the user number as a two-digit number "01" through "15" for the Service Code, if available. Where "O" is represented by the "BA" key.

Enter a code of up to four digits (up to six digits in MA1016 Series) using digits 1-9 only.

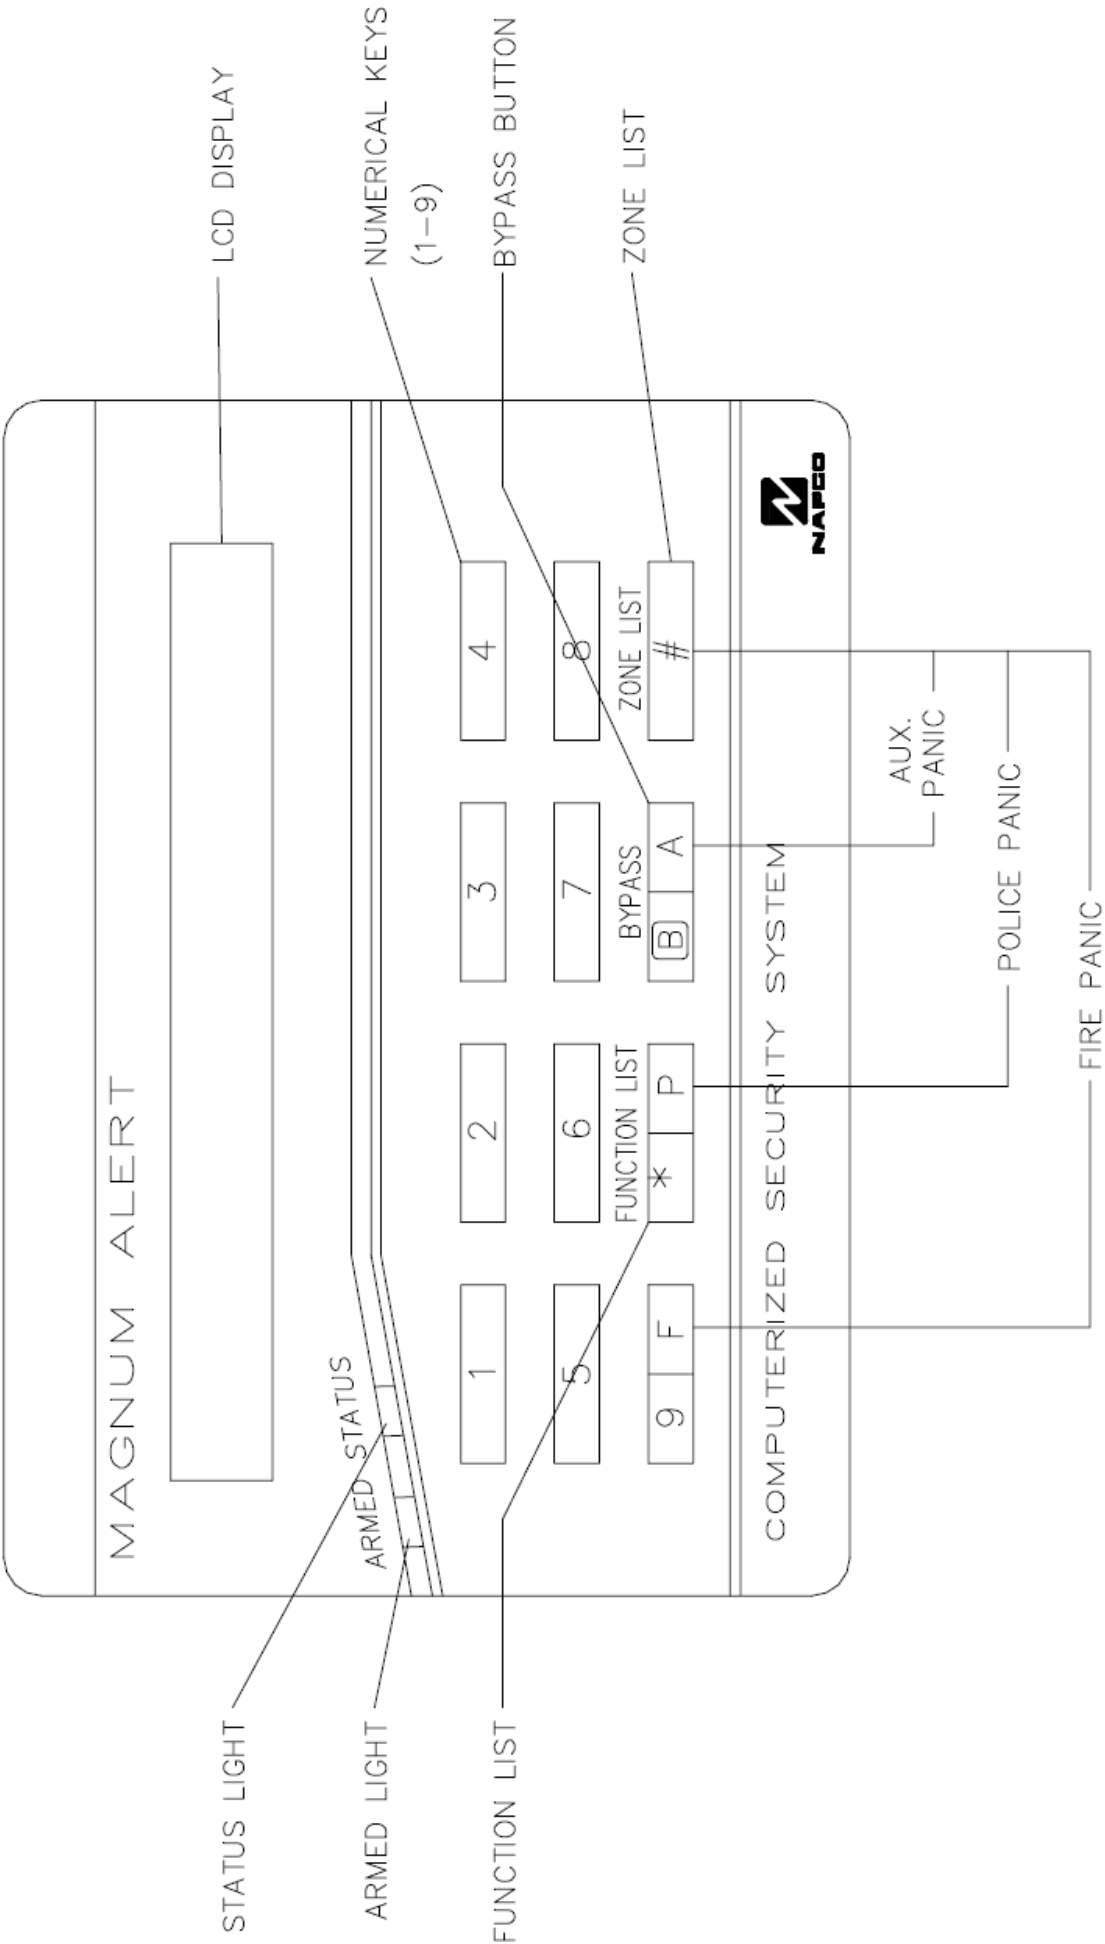

MAGNUM ALERT

STATUS LIGHT

LCD DISPLAY

ARMED STATUS

ARMED LIGHT

NUMERICAL KEYS  
(1-9)

FUNCTION LIST

BYPASS BUTTON

FUNCTION LIST

ZONE LIST

ZONE LIST

COMPUTERIZED SECURITY SYSTEM



AUX.  
PANIC

POLICE PANIC

FIRE PANIC