


**OPERATING  
GUIDE  
FOR YOUR  
RP1054e KEYPAD**

*Bypassing Zones*

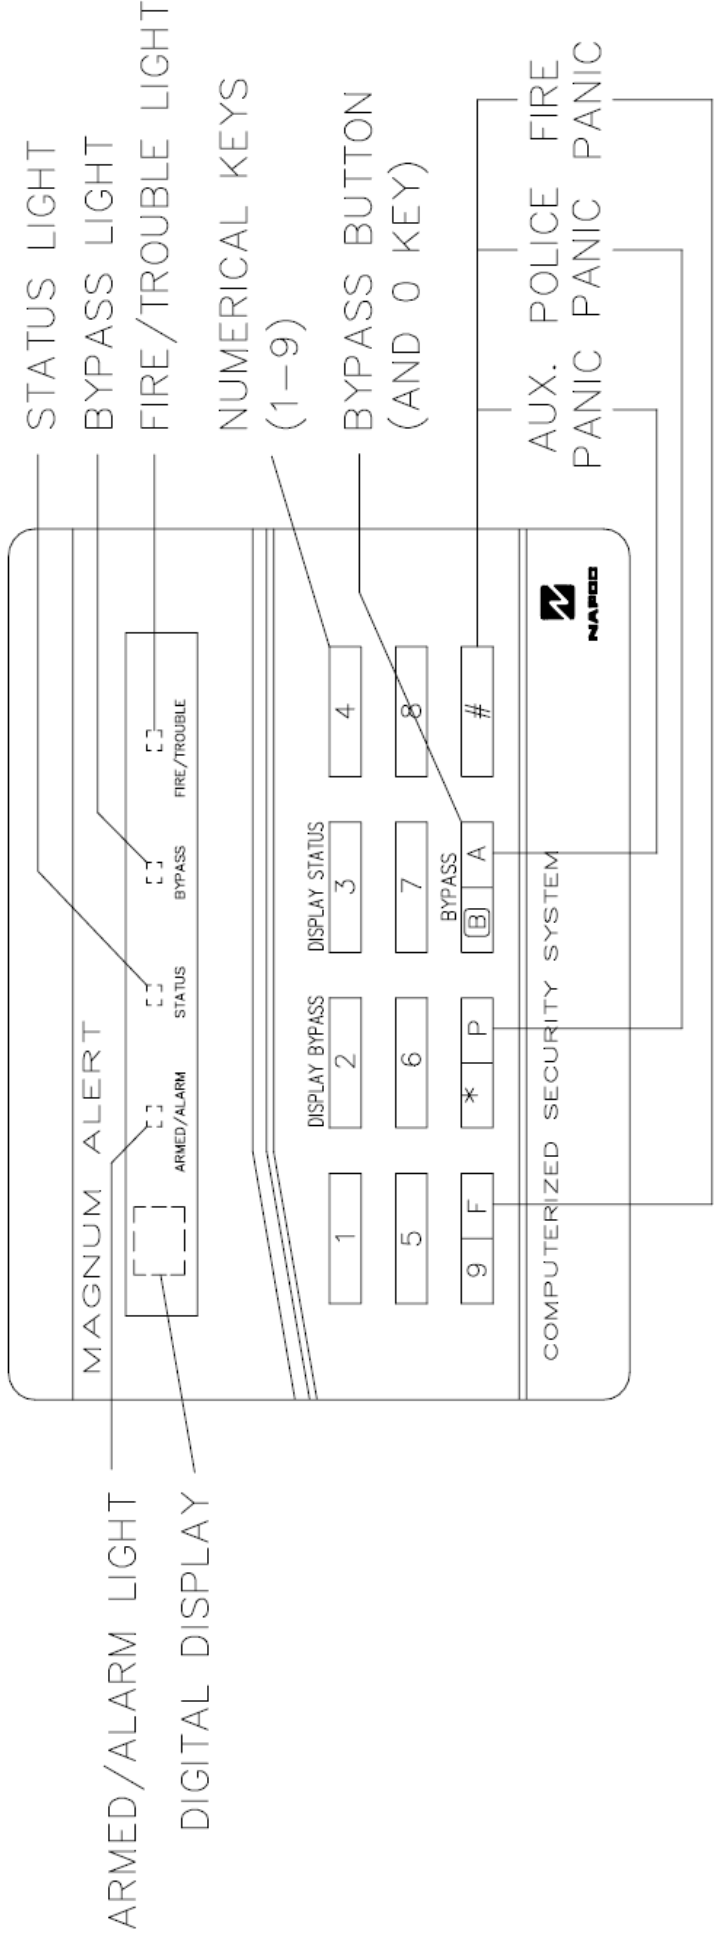

## PROTECTING YOURSELF WHILE ON THE PREMISES

### Arming with Zones Bypassed

Your alarm specialist may have programmed one or more zones for Selective Bypass, that is, they may be removable from the system. Since a bypassed zone cannot cause an alarm, you may wish to use this feature to turn off the interior areas while armed and keep your perimeter zones (windows, doors, etc.) active.

Press the bypass button (Key [B/A]), then the number of the zone you wish to bypass. (To verify which zones have been bypassed, hold down Key [2].) Check the green STATUS light to be sure that no zone is in trouble, then enter your arming code to arm.

### Bypassing Interior Zones

Your installer may have also selected all interior zones to be Group Bypass Zones (not for UL installations). Bypass these zones all at the same time by simply pressing Key [B/A] twice. The yellow BYPASS light will come on whenever you bypass one or more zones. Enter your code to arm remaining zones; the

green light will go off and the red ARMED/ALARM light will come on. The yellow light will go off the next time you disarm, indicating that the bypassed zones are no longer bypassed. (The BYPASS light does not come on when zones are auto-bypassed (unless programmed otherwise by your alarm specialist.) To review which zones have been bypassed, hold down Key [2] until all bypassed zones have been displayed.

### Arming with Instant Protection

Holding down Key [4] (until beep sounds) just before or after arming will cancel the entry delay on the exit/entry zones. The red ARMED/ALARM light will flash rapidly to indicate this condition. If someone enters through an Exit/Entry Zone, an alarm will sound immediately.

### Panic Alarm

(Fire Panic Enabled?  YES  NO)


(Police Panic Enabled?  YES  NO)

(Auxiliary Panic Enabled?  YES  NO)

- To activate a Fire Panic alarm, press Keys

[9/F] and [#] at the same time.

- To activate a Police Panic alarm, simultaneously press Keys [\*/P] and [#].

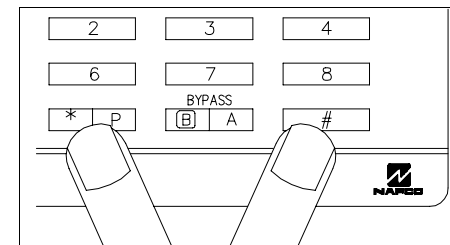

These features may have been programmed to send an alarm to a central station, activate an audible alarm, or both.

- To activate an Auxiliary Panic alarm, press Keys [B/A] and [#] simultaneously.

This feature is usually a report-only panic, acknowledged by the central station with a "ringback" at the keypad.