


# OPERATING GUIDE FOR YOUR RP1054e KEYPAD

*Code Changes*

1. Hold down Key [8] until the sounder beeps. This puts the system into the User Program Mode.
2. Enter your Program Code into the keypad; the keypad lights will flash and sounder will pulse.
3. Press Key [BA] \*.
4. Enter the user number. For MA1016-Series systems, enter the user number as a two-digit number "01" through "15" for the Service Code, if available. Where "0" is represented by the "BA" key.

Enter a code of up to four digits (up to six digits in MA1016 Series) using digits 1-9 only.

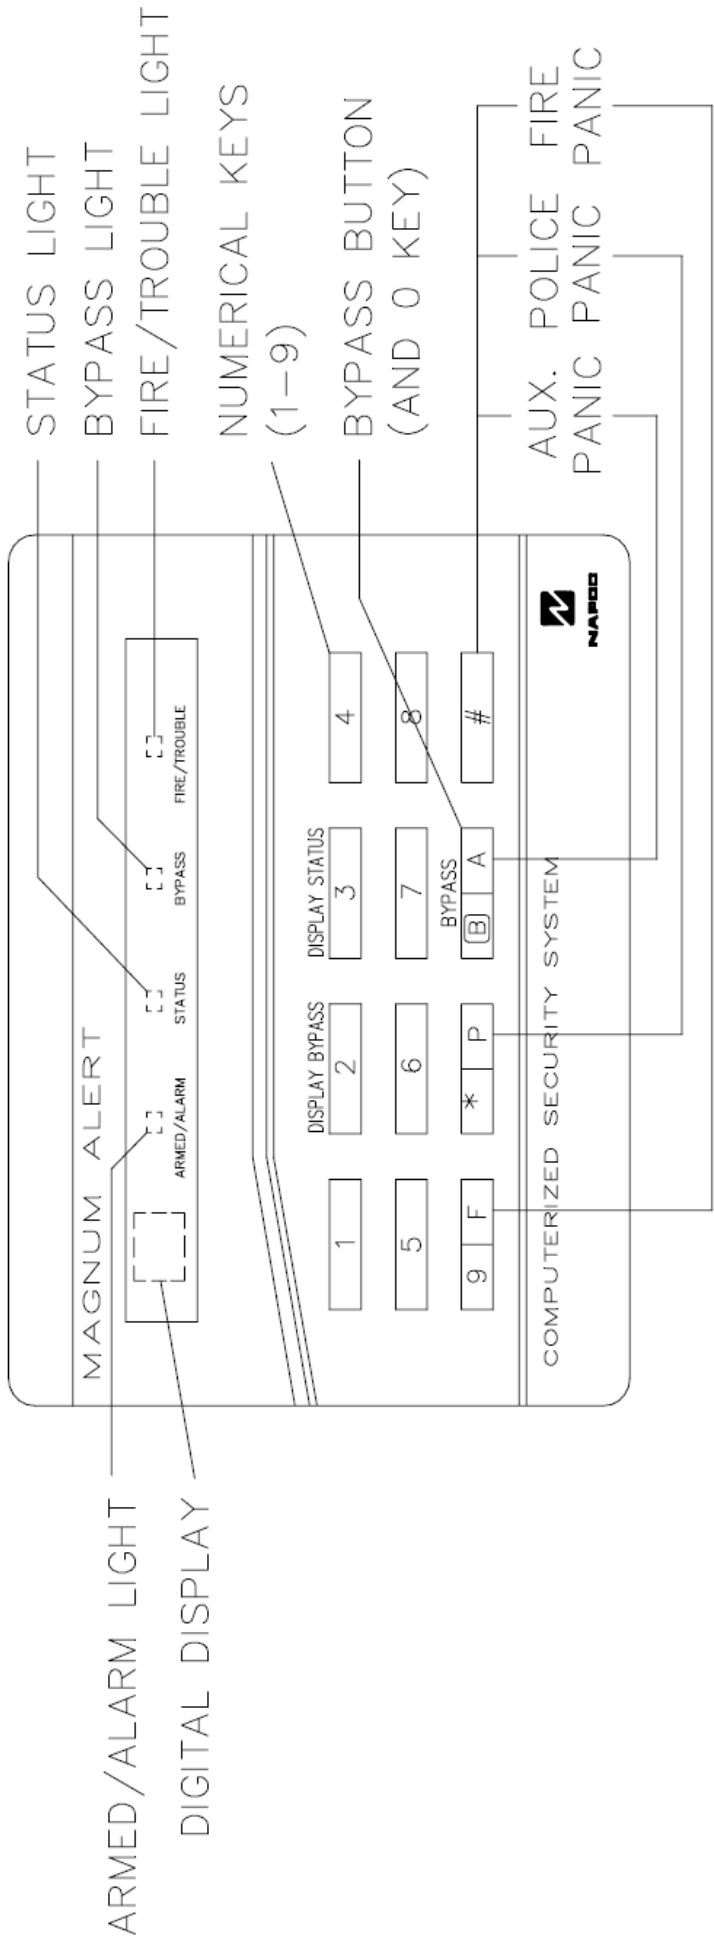

ARMED/ALARM LIGHT  
 DIGITAL DISPLAY