

# Simon XT User Guide

## Bypassing Zones



Bypassing a sensor allows you to open the sensor while the system is armed. For example, if you Doors & Windows are armed and you want to open your kitchen window but do not want to disarm the entire system, then you can bypass the kitchen window sensor and then open the kitchen window without causing an alarm. Bypassed sensors are automatically unbypassed when the arming level is changed to a level where the sensor is not active.

## **Bypassing**

1. Press **BYPASS** and enter the master code.
2. Scroll up/down until you reach the sensor to be bypassed.
3. The display shows, for example, *Sn 1 Front Door* on the first line.
4. Press **Enter** to bypass (deactivate) the sensor.
5. When a sensor is bypassed, the panel displays *Bypassed* on the second line.

## **Unbypassing**

1. Press **BYPASS** and enter the master code.
2. Scroll up/down to the sensor to be unbypassed. The sensor must be currently bypassed.
3. Press **Enter** to unbypass (reactivate) the sensor.
4. The panel removes the word *Bypassed* from the second line of the display