

## **BYPASSING**

It is possible to arm your system with a door or window purposely left open. This is known as Bypassing. Bypassing means that the system will be armed to the protection level you choose, however, the sensor or sensors that you bypass will not provide protection until you change protection levels again. Bypassing a window sensor for example, allows you to open that window for fresh air and still have the security of the rest of the system.

**NOTE:** Bypassing a sensor leaves that sensor unmonitored by the system

### **How To Use Direct Bypassing**

1. With all sensors closed, arm the system to the desired level.
2. Determine the number of the sensor you want bypassed.
3.
  - Enter your personal access code.
  - Press the BYPASS button.
  - Enter the two-digit sensor number you want bypassed.
4. A single beep will sound and the specific sensor will be bypassed.
5. You should verify that the correct sensor has been Bypassed by looking at an alarm display.

If you want to Direct Bypass more than one sensor, each must be bypassed one at a time by following steps 3 through 5. If you bypass sensors during an exit delay period, each time you bypass the exit delay time period begins again.