




466-1871 Rev H
April 2003

GE Interlogix


www.GE-Interlogix.com

**Part No:
60-875**

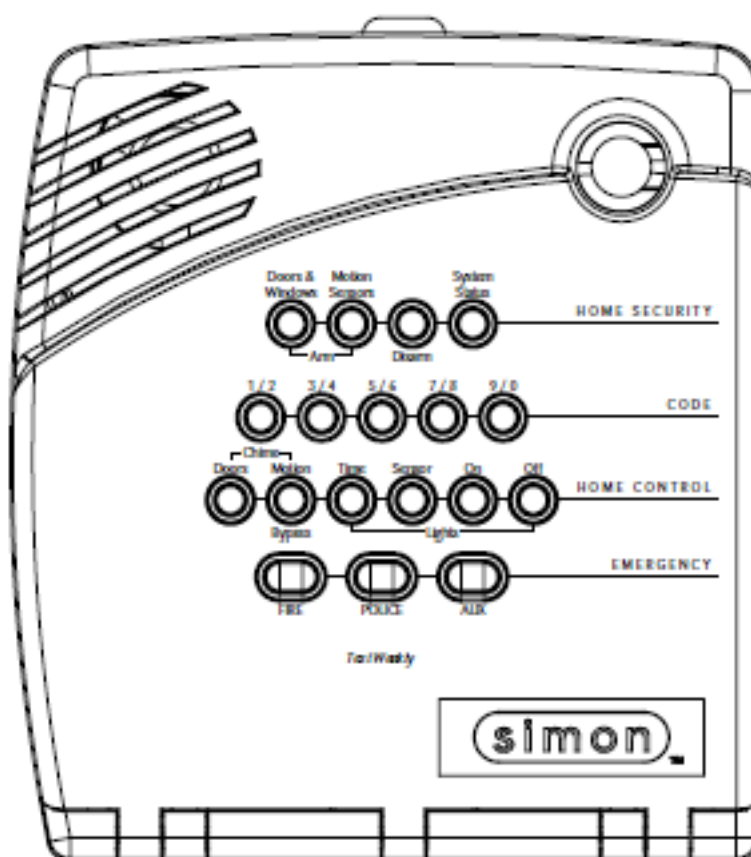

Simon[®] Security System

User Guide *Code Changes*

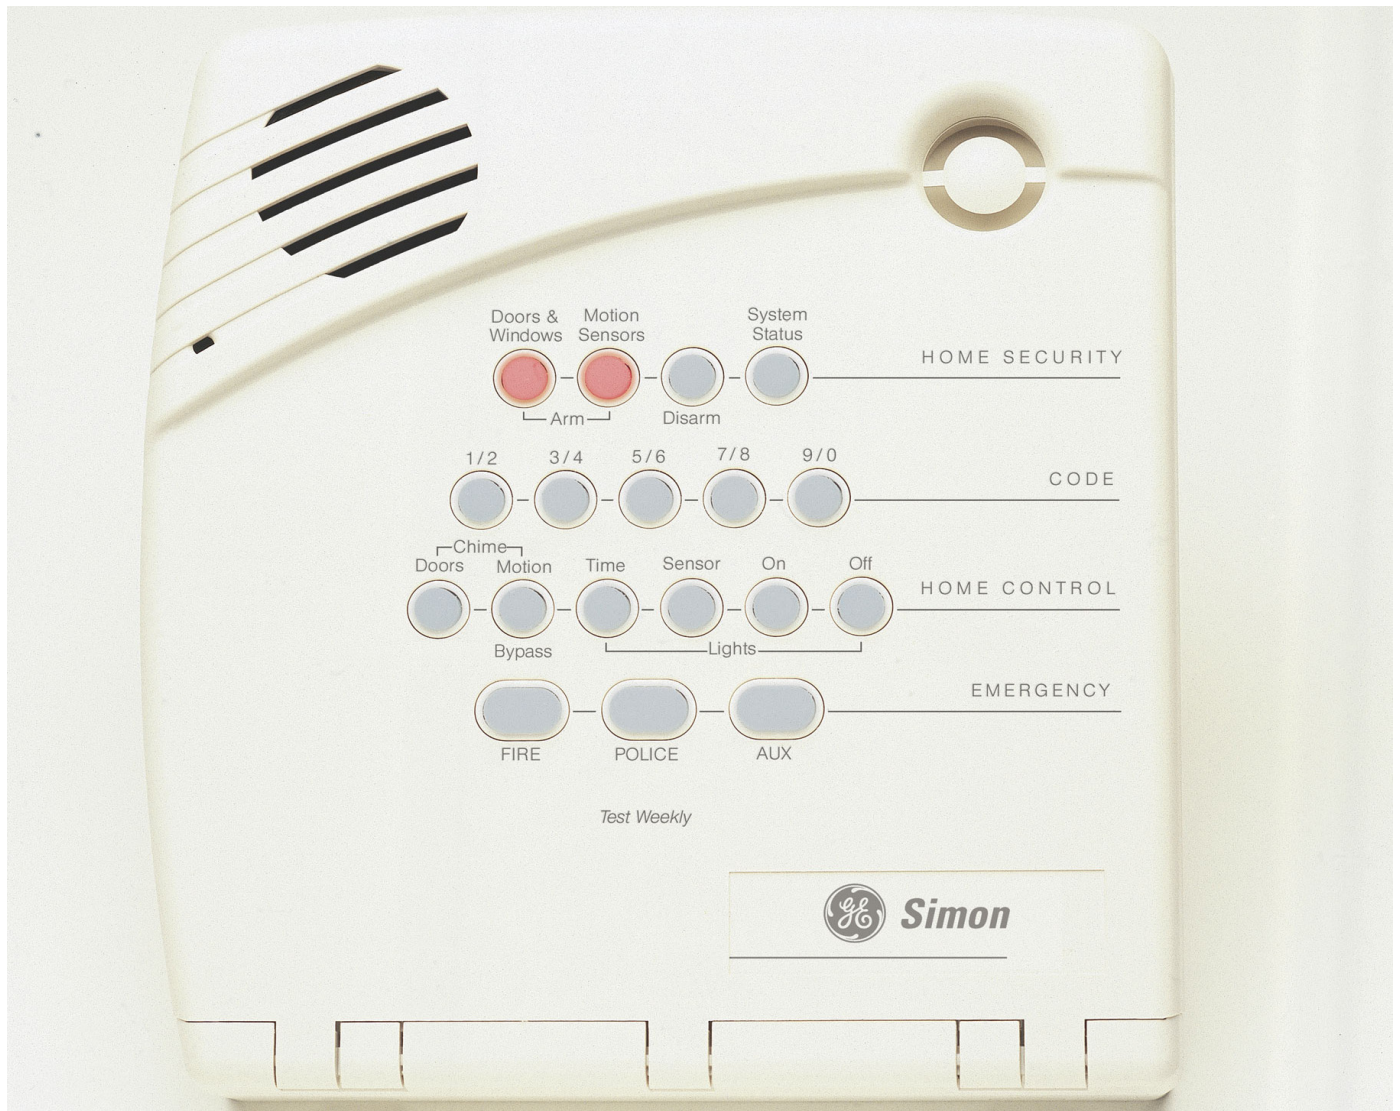

Direct Bypassing

Direct Bypassing refers to turning off (bypassing) certain sensors while the system is armed.

Note: You can only use this feature if there is a Bypass button on your panel and there are no Special Motion Chime sensors in your system.

1. Press the Bypass button until you reach the sensor to be bypassed (sensor must currently be unbypassed).
2. Enter Master Code

Direct Unbypassing

Direct Unbypassing refers to turning on (reactivating) bypassed sensors while the system is armed.

Note: You can only use this feature if there are no Special Motion Chime sensors in your system.

1. Press the Bypass button until you reach the sensor to be unbypassed (sensor must currently be bypassed).
2. Enter Master Code. OR Change arming level.