

INSTRUCTION MANUAL

Time Set Up Instructions

No date programming Required

GE Simon XT



Setting the Time

GE Simon XT

1. Scroll up/down until the display shows *Set Clock*.
2. Press **Enter**.
3. The display shows *Enter Code*.
4. Enter your master code with numeric keys.
Press **Enter**.
5. Press **Enter** again. The display now flashes the hours.
6. Scroll up/down to set the hours.
7. Press the **Enter** key to accept. The display now flashes the minutes.
8. Scroll up/down to set the minutes.
9. Press the **Enter** key to accept. The display is now flashing the AM/PM.
10. Scroll up/down to set the AM/PM.

11. Press **Enter** to accept. The display now shows the current time, and stops flashing.

12. Press **STATUS** twice to exit.