



Using Your XP-600 Security System

Bypassing Zones

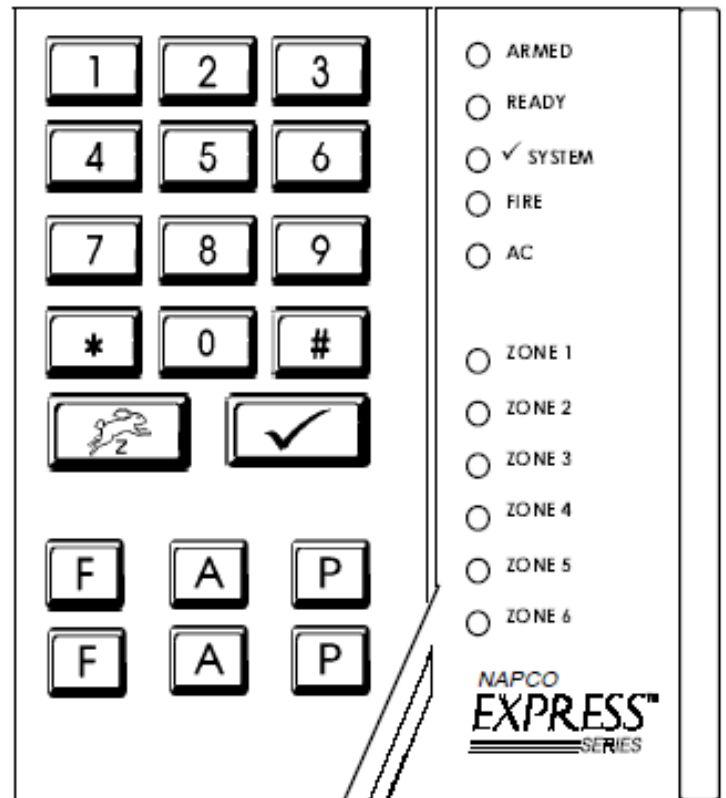


Keypad Controls and Indicators

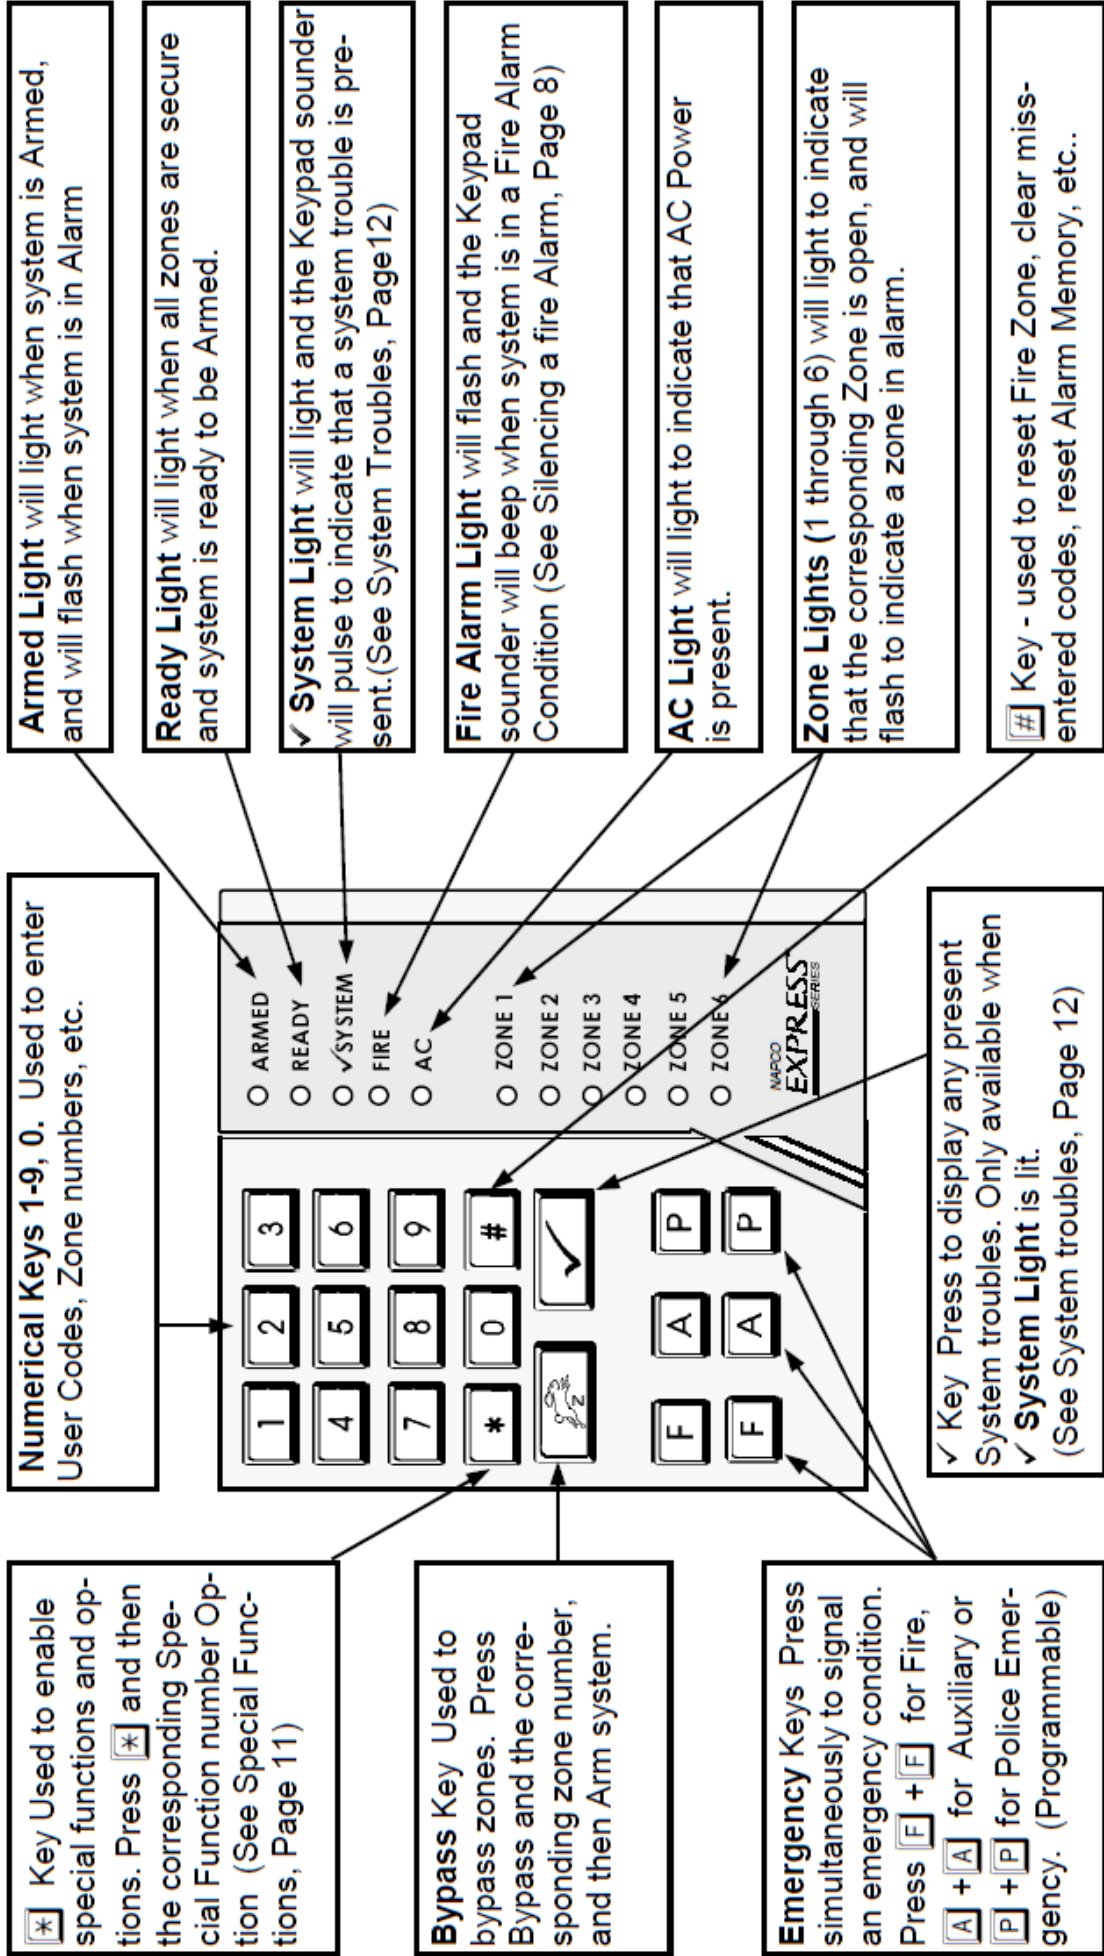

Bypassing Zones

If an open zone cannot be immediately fixed it can be left unprotected, or Bypassed, while the rest of the system is Armed.

To Bypass a zone:

1. Press  followed by the zone number to be Bypassed. The Bypassed Zone's light will flash slowly.
2. Enter your user code. The Green Ready light will go out and the Red Armed light will light.
3. Leave the premises through the Exit/Entry door.

When the system is subsequently disarmed, all bypassed zones will be reset, ready to be armed again. If it is necessary to bypass any inoperative zone(s), it is important to have the zone(s) repaired as soon as possible. A bypassed zone does not provide any protection, compromising system security.