


Using Your XP-600 Security System

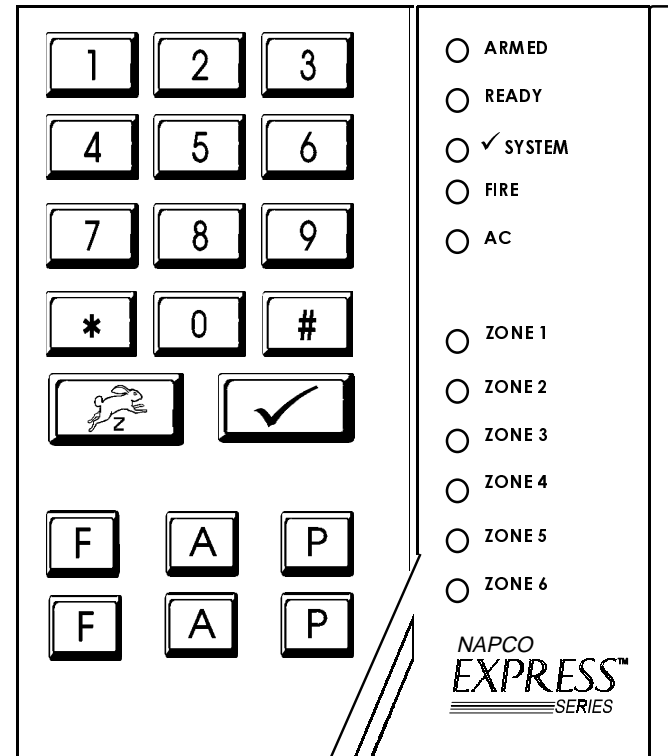

CODE CHANGES


Keypad Controls and Indicators

*** Key** Used to enable special functions and options. Press ***** and then the corresponding Special Function number Option (See Special Functions, Page 11)

Bypass Key Used to bypass zones. Press Bypass and the corresponding zone number, and then Arm system.

Emergency Keys Press simultaneously to signal an emergency condition. Press **F + F** for Fire, **A + A** for Auxiliary or **P + P** for Police Emergency. (Programmable)

Numerical Keys 1-9, 0. Used to enter User Codes, Zone numbers, etc.

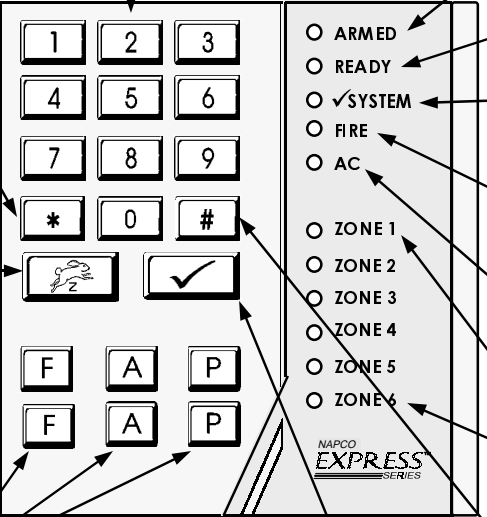

Armed Light will light when system is Armed, and will flash when system is in Alarm

Ready Light will light when all zones are secure and system is ready to be Armed.

System Light will light and the Keypad sounder will pulse to indicate that a system trouble is present. (See System Troubles, Page 12)

Fire Alarm Light will flash and the Keypad sounder will beep when system is in a Fire Alarm Condition (See Silencing a fire Alarm, Page 8)

AC Light will light to indicate that AC Power is present.

Zone Lights (1 through 6) will light to indicate that the corresponding Zone is open, and will flash to indicate a zone in alarm.

✓ Key Press to display any present System troubles. Only available when **System Light** is lit. (See System troubles, Page 12)

Key - used to reset Fire Zone, clear miss-entered codes, reset Alarm Memory, etc..

Programming User Codes

Your Installer has assigned a User 1 Code which may be used to not only Arm and Disarm the system, but also to enter the User Program Mode, where you can program other user codes. The following explains how you will use this code to program or erase additional user codes.

Entering the User Program Mode

Press followed by and then enter the User 1 code. The Armed, Status and System Lights will flash, and the keypad will beep 4 times. You are now in the User Program mode. Zone lights 1 through 6 will light to indicate any User Codes presently programmed.

- ARMED
- READY
- SYSTEM
- FIRE
- AC

Programming / Reprogramming User Codes

- 1** Press the User number to be programmed. (For example, press to program the User 2 code.). The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to program.
- 2** Press in the 4 digits of the new User 2 code, the keypad will beep 4 times.
- 3** If there are more user codes to be programmed, return to step 1 above, otherwise, go to Exiting the User Program Mode below.

- ZONE 1
- ZONE 2
- ZONE 3
- ZONE 4
- ZONE 5
- ZONE 6

Erasing a User Code

- 1** Press the User number to be erased. The keypad will beep 2 times and the corresponding Zone light will flash to indicate the user number you are about to erase.
- 2** Press . The zone light will go out to indicate that the user code has been erased.
- 3** If there are more user codes to be erased, return to step 1 above, otherwise, go to Exiting the user Program Mode below.

Exiting the User Program Mode

When you are done programming or erasing User codes, press to Exit the User Program Mode.